



GTEC UPS MODEL:

LIBRAPRO TP 100-200

100 - 200 kVA THREE PHASE/THREE PHASE
On Line Double Conversion (VFI) Technology

TECHNICAL SPECIFICATIONS

INDEX

1.	PURPOSE.....	2
2.	SYSTEM DESCRIPTION	2
3.	REFERENCE STANDARDS.....	2
4.	APPLICATIONS.....	3
5.	CONFIGURATIONS.....	4
6.	UPS DESCRIPTION	8
	6.1 AC/DC Converter	9
	6.2 Gen Set Friendly.....	9
	6.3 Battery Care System	10
	6.4 DC/AC Converter	10
	6.5 Static switch	11
7.	CONTROL PANEL	13
8.	DISCONNECTING SWITCHES	15
9.	COMMUNICATION	16
	9.1 Report Signals	16
	9.2 Commands.....	16
	9.3 Emergency Power Off (E.P.O.).....	16
	9.4 Monitoring and control software.....	17
10.	UPS CABINET	17
11.	INSTALLATION	17
12.	OPTIONS	18
	12.1 Communication	18
	12.2 Remote graphic panel.....	20
	12.3 Battery cabinet	21
	12.4 UGS - UPS Group Synchronizer.....	21
	12.5 PSJ - Parallel Systems Joiner	21
	12.6 Isolating transformers	21
	12.7 Kit for UPS without input and output neutral.....	22
	12.8 Protection levels.....	22
	12.9 Environmental sensors.....	22
	12.10 Fan Failure monitoring	22
13.	ENVIRONMENTAL REQUIREMENTS	23
14.	TECHNICAL DATA.....	23

1. PURPOSE

The present specification defines the technical characteristics of the UPS LIBRAPRO, a device which supplies clean energy to the connected load, without any interruption due to disturbances in the mains power supply, including a total power failure.

LIBRAPRO is a series of UPSs designed by GTEC a leading manufacturer of uninterruptible power supplies from 650 VA to 800 kVA, with over 20 years of experience in the sector.

To find out about other products available, as for example Static Transfer Switch (STS), please visit the website www.gtec-power.eu.

2. SYSTEM DESCRIPTION **Errore. Il segnalibro non è definito.**

The LIBRAPRO TP series is available in three phase models **100-120-160-200 kVA** with On Line double conversion technology in accordance with VFI-SS-111 classification - as defined by standard IEC EN 62040-3 - with transformer in output to the inverter.

LIBRAPRO is compatible with the most critical, industrial and Information Technology (IT), services thanks to its many features including:

- a) Battery Care System:
 - Battery recharge with two voltage levels as per characteristics $IU_1 U_2$;
 - Voltage Recharge with temperature compensation;
 - Compatibility to recharge battery with long autonomy;
 - Battery test to check a battery decay.
- b) Isolation transformer on the inverter that protects the load from network disturbances in all the working conditions without altering the overall efficiency that remains around 94%.
- c) Double load protection towards the battery: one furnished with intrinsic electronic protection in the control circuits and galvanic furnished with output transformer from the inverter;
- d) Thermal overrating of the inverter to guarantee an overload (kVA) at 110% for 60 minutes;
- e) The nominal output power of the Ups is given with a power factor of 0,9.
- f) Backfeed protection;
- g) System expandability up to 8 units, Dual BUS and Dynamic Dual Bus systems.
- h) 'Energy Management System' function for systems in parallel configurations.

3. REFERENCE STANDARDS

Our company quality system is certified ISO 9001/2000 (Certificate No CERT-04674-99-AQ-VEN-SINCERT) and covers all procedures, operating methods and monitoring of all stages from design to production and sales activities.

This certification is a guarantee for the customer with regard to the following aspects:

- Use of quality materials;
- meticulousness in the production and testing phases;
- Constant customer support.

Besides company certification, the product is classified VFI-SS-111 in conformity with standard IEC EN 62040-3 and satisfies the following UPS specific standards:

- **IEC EN 62040-1:** Static uninterruptible power supplies (UPS): general and safety provisions;
- **IEC EN 62040-2:** Electromagnetic compatibility (EMC) requirements category C3;
- **IEC EN 62040-3:** Methods of specification of performances and test provisions;

The LIBRAPRO series also makes reference to the following general standards, where applicable:

- **IEC 60529:** Degree of protection provided by enclosures;
- **IEC 60664:** Insulation for low-voltage equipment;
- **IEC 60755:** General Requirements for Residual Current Operated Protective Devices;
- **IEC 60950:** General safety provisions for "Information Technology" equipment;
- **IEC 61000-2-2:** Electromagnetic compatibility immunity;
- **IEC 61000-4-2:** Electrostatic discharge immunity test;
- **IEC 61000-4-3:** Radio frequencies, electromagnetic immunity test;
- **IEC 61000-4-4:** Transitory overvoltage immunity test;
- **IEC 61000-4-5:** Overvoltage immunity test;
- **IEC 61000-4-11:** Voltage dips, short interruptions and voltage variations immunity test;
- **IEC 61000-3-12:** Harmonic current emissions (for equipment with rated current $> 16 \text{ A} \leq 75$).

European Directives:

LVD directive 2014/35/EU

The LVD covers all health and safety risks of electrical equipment operating with a voltage between 50 and 1000 V for alternating current and between 75 and 1500 V for direct current.

EMC directive 2014/30/EU

The EMC Directive **limits electromagnetic emissions from equipment**; The Directive **also governs the immunity of such equipment to interferences**.

4. APPLICATIONS

The UPSs of the LIBRAPRO series are suitable for all applications requiring protection of the critical load, from simple installations to more complex systems where a higher level of reliability and maintainability is required.

Data Centers and Telecommunication: the uninterruptible power system can grow together with your business since the basic system can be expanded with up to eight units connected in parallel without compromising the initial investment. Furthermore, greater levels of reliability and maintainability can be achieved with the more advanced configurations such as the "Dual Bus" and "Dynamic System Expansion".

Industrial processes and electro-medical systems: the UPS is particularly suitable for application with industrial processes and the power supply to electro-medical systems, thanks to its design principles and technical features, such as for example:

- inverter with output transformer guaranteeing isolation of the load from mains interference in all conditions;
- high short circuit and overload capacity;
- high battery recharging capacity, enabling applications with different kinds of batteries (sealed, vented or Nickel Cadmium) with long back-up time.


Emergency systems: the Stand-by OFF mode of operation can be selected to activate the emergency back-up function, as defined by standard EN 50171 (Central Power Supply Systems).

5. CONFIGURATIONS

The following configurations are available:

Single UPS


The single version of the system, normally used for simple installations, can be extended up to 8 units to satisfy increases in load power or to introduce a level of redundancy. The same group can function as a frequency converter of 50/60 Hz and vice versa with or without battery by a simple arrangement that can be done in site. With such a configuration the UPS can be used without input neutral cable.

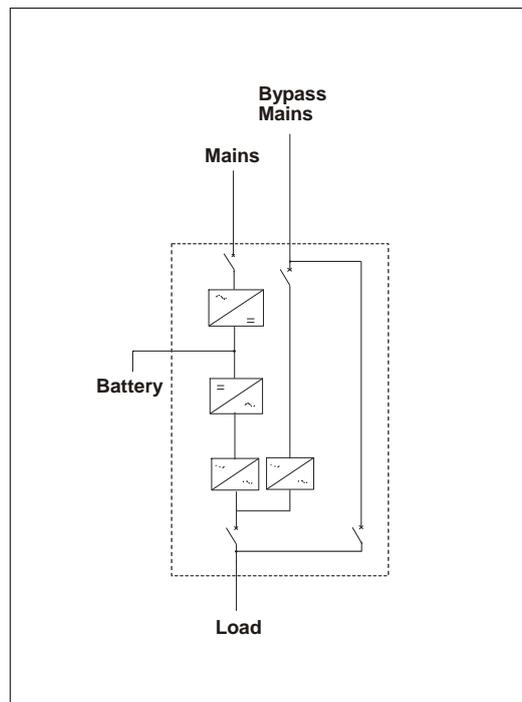

Parallel configuration

Up to 8 UPSs can be connected in parallel to increase the power of the uninterruptible power system (power parallel) or to enhance its reliability (redundant parallel). The system is defined as "redundant parallel" when the block of one or several UPSs does not determine the loss of the power supply.

All the UPSs power the load simultaneously with automatic sharing of the current.

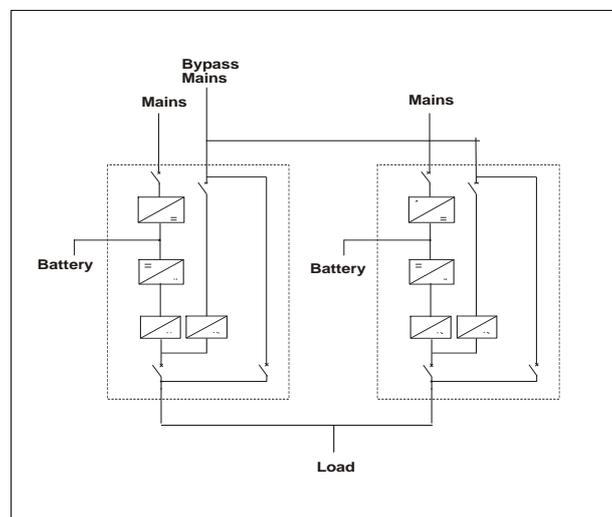

UPS in 1+1 redundant configuration

The units exchange information on the operating status and the sync signals by means of the RS485 connections in loop with dual redundancy. This means that even in the event of the accidental interruption of both connections, only the UPS affected by this interruption cuts itself off, while the other one continues to operate without any interference.

The “**Hot System Expansion**” feature means that a new UPS can be added to the system while the other units are on-line and powering the load from the inverter.

The integrated UPS will configure itself automatically with the system data without any disturbance to the load.


In configurations with more than two units, to improve the normal and extraordinary maintenance operations, it is advisable to install an external maintenance by-pass and to inhibit the UPS's internal one.

The UPS will be equipped with terminal to connect the following auxiliary contacts:

- External Maintenance Switch
- External Load Output Switch

The parallel system may function with a separate battery or a single battery, that is, one battery shared by several UPSs.

In the case of loss of redundancy the system has an alarm message.

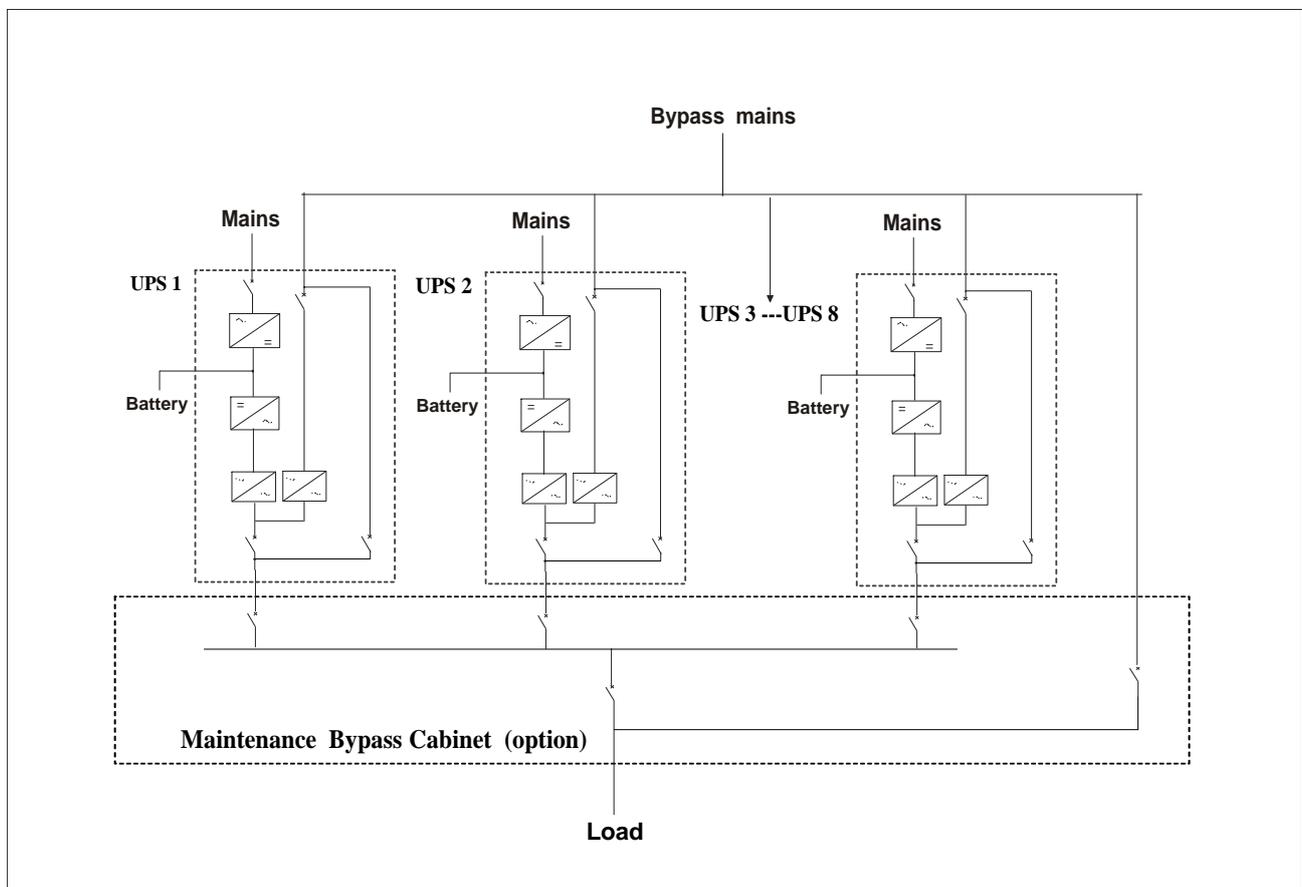


Dual Bus System (UGS)

Two independent systems can be configured in Dual Bus with a single or separate power source. The synchronization option (UGS) keeps the outputs of the two systems constantly synchronized, regardless of the input variations and when the system is powered by the battery.

Each system comprises up to a maximum of 4 parallel UPSs.


This system has been designed for configurations that use the STS (Static Transfer Switch) since it guarantees switching from one continuous source to the other without disturbances to the loads.

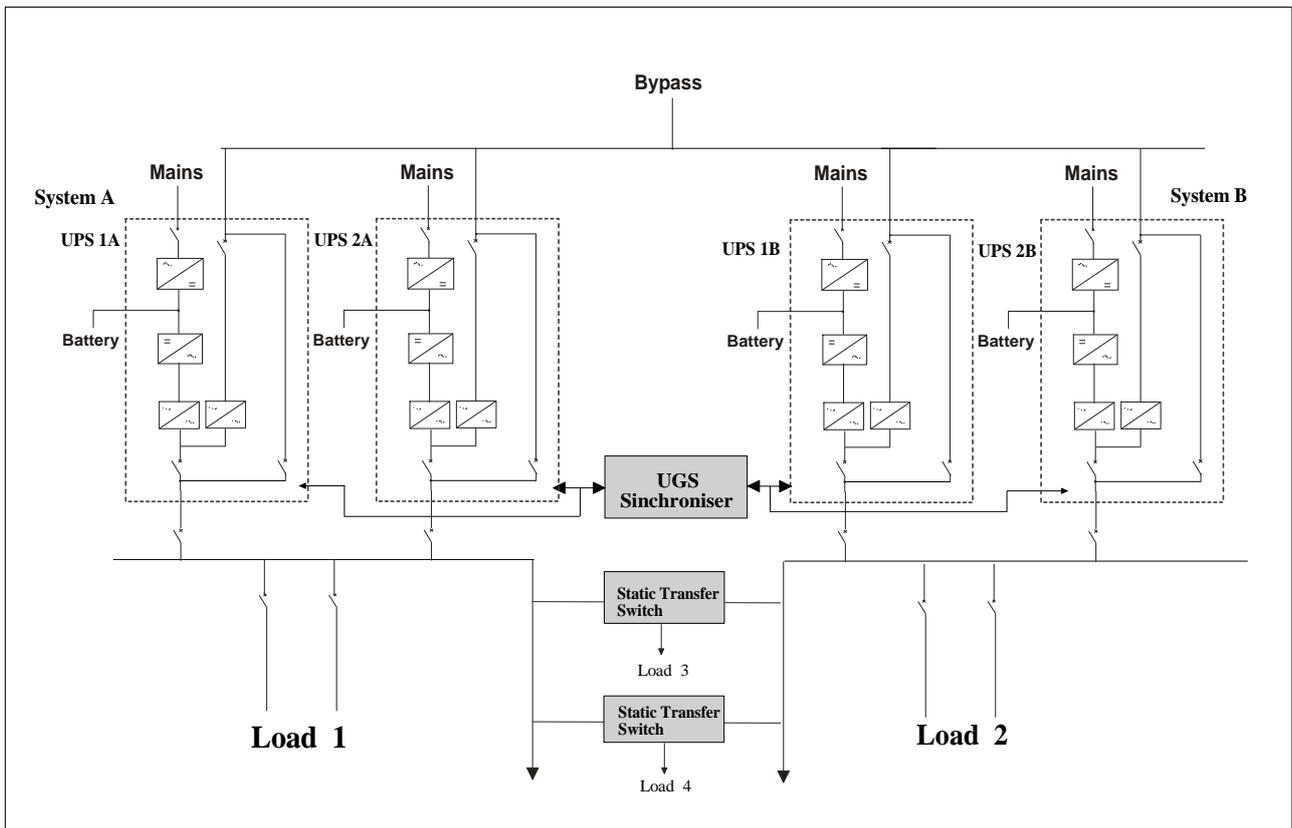

Dynamic Dual Bus System (PSJ)

Two independent systems (up to 4 units each) can be connected in a “Dynamic Dual Bus” configuration by means of the PSJ (Parallel System Joiner) option.

This enables the two systems to be joined to form a single system when, for example, part of one system is undergoing maintenance and it is felt appropriate to use the redundant UPS for both bars of the load. The synchronization and the equal distribution of power is guaranteed by the PSJ.

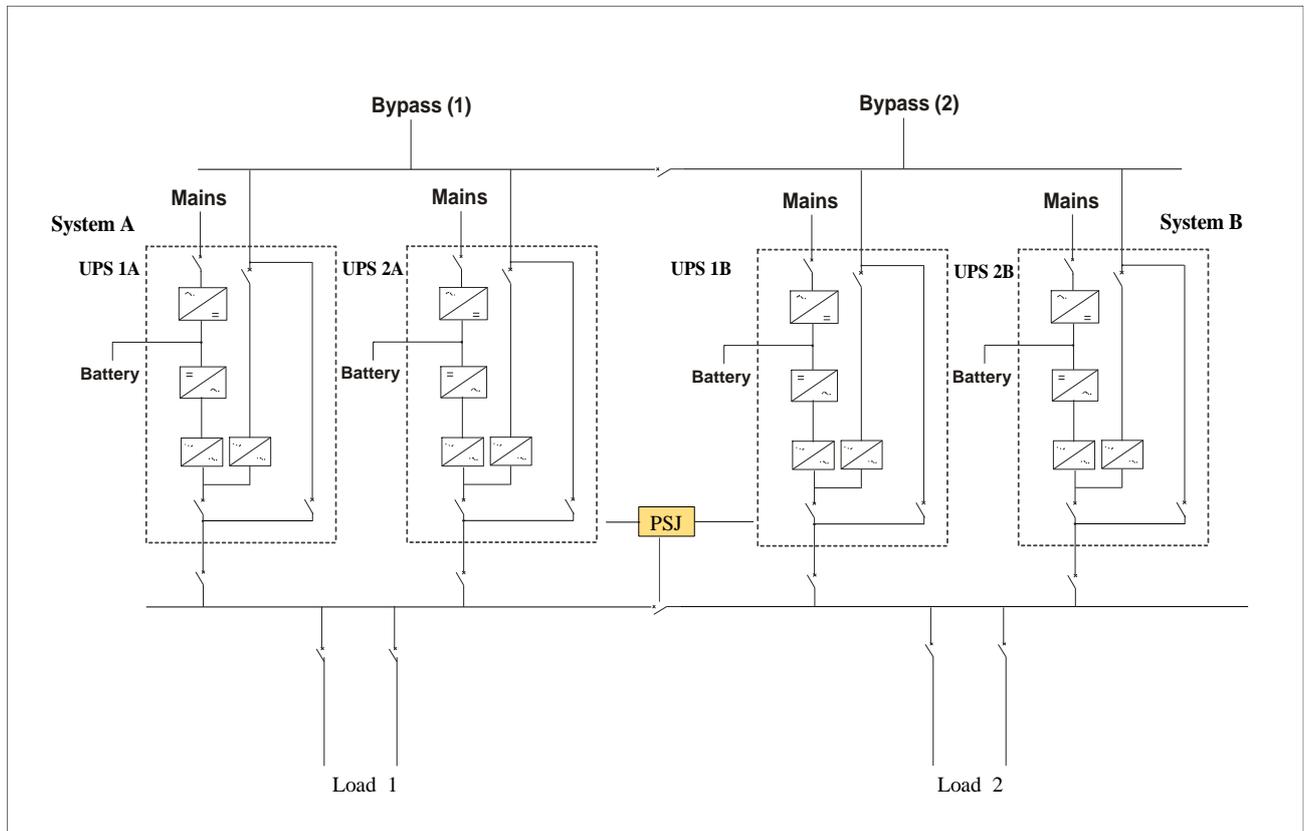

6. UPS DESCRIPTION

The uninterruptible power supply can be set to operate in four operating modes: ON-LINE, STAND-BY ON, SMART ACTIVE and STAND-BY OFF.

Mode: ON-LINE

Normal Operation: The rectifier draws energy from the mains to power the inverter and keep the batteries charged; the inverter powers the load with voltage and frequency stabilized and in sync with the by-pass mains, if appropriate.

Emergency operation: when the mains power supply goes out of the pre-set limits, the rectifier switches off and the inverter is powered from the battery for the envisaged back-up time without any disturbance to the load. When the mains power supply is restored, the Rectifier starts to operate gradually (power walk in), powering the batteries again and charging the inverter

By-pass operation: in the event of an inverter overload beyond the envisaged limits, or a manual shutdown, the load is automatically transferred onto the by-pass mains by means of the Static switch without any disturbance to the load.

Mode: STAND-BY ON

The load is normally powered from the by-pass mains, the rectifier keeps the batteries charged. When the mains goes outside the preset range, the load is transferred automatically onto the inverter until the mains returns to a suitable level. This mode is suitable for powering loads that are not sensitive to mains interference, thus allowing increased system efficiency of up to 98%.

Mode: SMART ACTIVE


When the LIBRAPRO is configured in SMART ACTIVE mode, it automatically defines whether to operate in ON-LINE or STAND-BY OFF mode.

This is done by monitoring the by-pass mains: if this remains suitable for a defined period, the system sets itself to STAND-BY ON mode; otherwise it remains in ON-LINE mode.

Mode: STAND-BY OFF

When the mains power supply is present, the rectifier keeps the batteries charged and the inverter is switched off. When the mains fails, the rectifier switches off and the inverter is activated in approx. 200 ms, using the battery energy. This application is suitable for the power supply of emergency lighting, as defined by standard EN 50171.

The block diagram of the LIBRAPRO TP system is shown below:

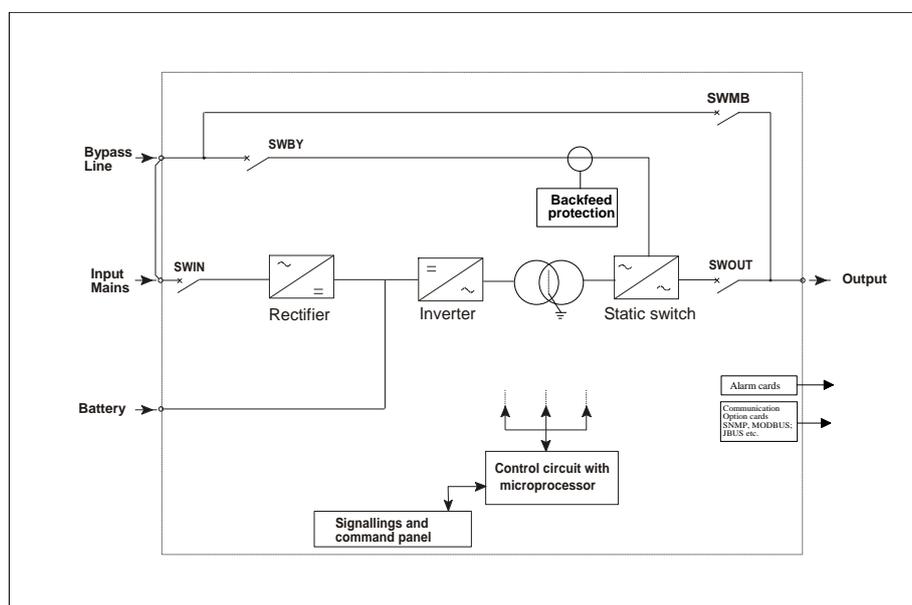


6.1 AC/DC Converter

The AC/DC Converter converts the alternate voltage into direct voltage to power the inverter at nominal load and to charge the batteries. The input stage of LIBRAPRO TP UPS is with a 6 pulse bridge total controlled by SCR (see the tables with the Technical Data at the end of the present specifications).

6.2 Gen Set Friendly

LIBRAPRO allows to reduce the impact upstream the Generator Set. In detail the features are as follow:

- **Power Walk-In:** when the input voltage is applied to the rectifier, as per example after a mains power failure, this reaches the nominal power progressively in a programmable time from 0 to 30 seconds.
- **Power Walk-in delay timer:** in parallel configurations the start-up of the rectifiers can be delayed to reduce the impact to any generator located upstream. The delayed start-up is programmable up to 120 seconds.

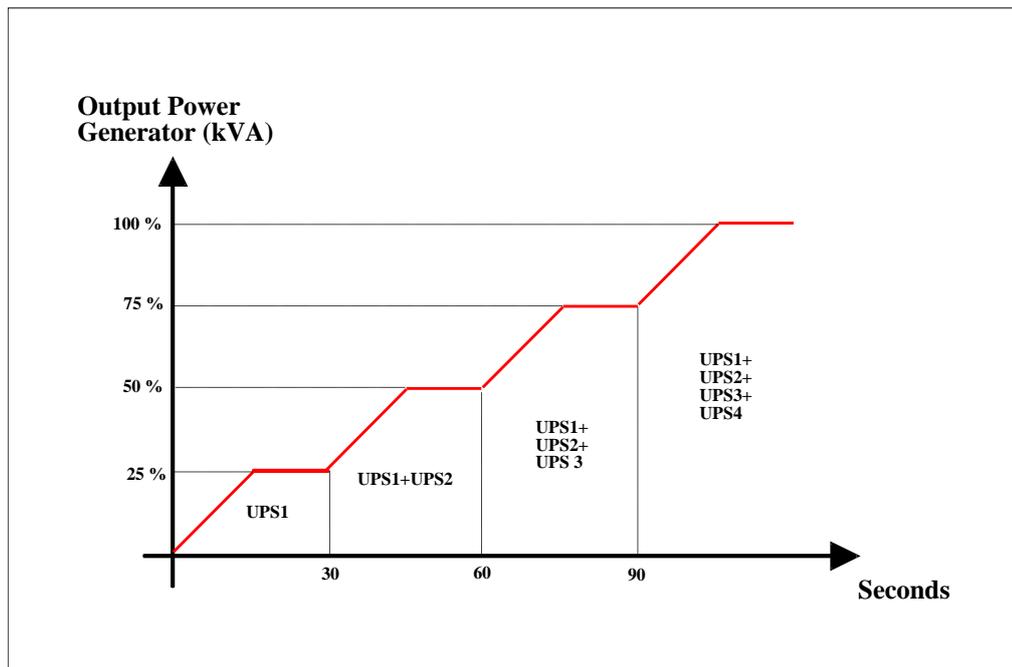

Example of calibration from the rectifiers in a parallel system

- **Inhibition of the battery charge current:** while the UPS is operating with a generator set, battery recharging can be excluded and all the available power can be used to feed the load.
- **Inhibition of bypass synchronism:** in case of the generator set with a very unstable output frequency, the Inverter synchronization with bypass can be inhibited. In such as case the inverter generates an output voltage in the free running mode by using the internal oscillator. Consequently, the transfer of the load on the bypass is not allowed.

The “battery recharge current” and “Inverter Synchro with bypass” inhibitions are activated by a remote contact of the generator set connected to the optional Rely Card (see Chapter 12 – Options).

6.3 Battery Care System

The “Battery Care System” is a set of functions to control, manage and preserve the battery as long as possible.

- a) **Battery Recharging:** This UPS is suitable for hermetic lead batteries (VRLA), AGM, open vase and Ni-Cd. Depending on the battery type, two recharge methods are available:
 - **Cyclical recharging (factory set):** the state of the battery charge is kept constantly under control and when the charge level drops below the established level, a recharge cycle starts up automatically following the IU characteristic (EN 50272-2). In any case the UPS automatically runs a top-up charge cycle every 24 hours.
 - **Two level recharging (configurable):** this recharge is carried out with two levels of current at two voltage levels following the IU₁ U₂ characteristic (EN 50272-2). During the first phase the charging takes place at the rapid charge voltage (U₁), followed by a second phase at the floating charge level (U₂). Both these recharge values are ensured with **temperature compensation of the recharge current** as required by the battery manufacturers so that battery life is not jeopardize. This type of recharge can be configured on-site and is mainly used with open vase or Ni-Cd batteries.
- b) **Battery test:** in normal operating conditions the battery is checked automatically at regular intervals or on manual command. The test takes place without appreciably discharging the battery, in complete safety for the load and without compromising the battery service life. If the test has a negative outcome, a report signal will appear on the UPS panel and remotely.
- c) **Protection against slow discharge:** in the event of discharges of long duration and low load, the end of discharge voltage is raised to approx. 1,8 V/eI as prescribed by the battery manufacturers so as to avoid damaging the batteries.
- d) **Current Ripple:** Thanks to the STEP-UP/STEP-DOWN converter, that provides to recharge and discharge the battery, the current ripple in the battery is extremely reduced. This feature eliminates one of the main causes of reduced battery reliability.

6.4 DC/AC Converter

The DC/AC converter converts direct voltage in to stabilized, alternate sinusoidal current to supply the load. With the UPS in ON-LINE mode, the load is always powered from the inverter.

This comprises a three phase inverter with IGBT (Isolated Gate Bipolar Transistor), a transistor that allows high switching frequencies (>20 kHz) and consequently low consumption and low noise.

The inverter output is connected to the transformer, thus ensuring galvanic isolation between output and battery.

Voltage regulation

Output voltage is regulated by using the independent phase control, a characteristic that allows a better static and dynamic response. In detail:

- a) **Static condition:** the output voltage from the inverter remains within $\pm 1\%$ for all the input tension variations within the permissible limits;
- b) **Dynamic condition:** for load variations from 0 to 100%, the output voltage remains within $\pm 5\%$ below the values defined by class 1 of standard EN 62040-3.

Frequency regulation

The inverter output frequency is generated autonomously by an internal oscillator in synch with that of the by-pass mains; the frequency stability towards the load therefore depends on the operating conditions:

- a) Frequency stability
 - a. With mains available: the internal oscillator follows the variations in frequency of the by-pass mains, according to the set value, which is normally $\pm 2\%$ (can be calibrated from $\pm 1\%$ al $\pm 6\%$).
 - b. With mains not available: the inverter generates the output current frequency autonomously with a stability of $\pm 0,05\%$.

b) Speed of frequency variation

The maximum output frequency variation of the inverter to reach onto that of the backup by-pass mains is 2Hz/s for the single UPS and 1Hz/s for the parallel version.

Output voltage distortion

The regulation of the inverter guarantees the output voltage distortion with linear loads within 1% (maximum 2% with battery nearly discharged). With non-linear loads, as defined by standard EN 62040-3, the output voltage distortion does not exceed 3%.

Output power

The inverter is sized in order to provide output power (KVA) with power factor of 0,9 inductive.

Overload

The inverter is sized to supply a power overload (kVA) of 110% for 1 hour, 125% for 10 minutes and 150% for 1 minute, on the three phases. On two phases, the limit is 200% for 6 s.

If the time or power limits are exceeded, the load is transferred onto the by-pass mains.

Short circuit capacity

In the event of a short circuit on the load and with power supply from the battery, the inverter can supply a current limited to 180% for 1 s in the event of a short circuit on the three phases, and 300% for 1 s in the presence of a short circuit between phase and neutral.

Symmetry of output voltage

In all conditions, the symmetry output voltage is guaranteed within $\pm 1\%$, for balanced loads and $\pm 2\%$ for 100% unbalanced loads (e.g. one phase at nominal load, the other two without load).

Phase displacement

The inverter three phase output voltages are guaranteed with a phase shift angle of $120^\circ \pm 1^\circ$ for 100% balanced and unbalanced loads.

6.5 Static switch

The Static Switch is an electronic device that transfers the load onto the by-pass mains without any break in power in the following circumstances:

- a) manual shutdown of the inverter;
- b) exceeding of the inverter overload limits;
- c) exceeding of the internal overtemperature limits;
- d) inverter fault;
- e) DC voltage outside the admitted range.

If at the time of switching the inverter voltage is not in sync with that of the by-pass mains, the transfer takes place with a delay of approx. 20 ms to avoid possible damage to the load. However this value can be set from 10 to 100 ms to cover all the requirements of the various types of load.

By-pass mains voltage

Transfer onto the by-pass mains only takes place if the voltage and frequency are considered "suitable" to power the load. The limits of acceptability are defined by the user in relation to the connected load:

- Voltage window: $\pm 10\%$ (can be calibrated from $\pm 5\%$ to $\pm 25\%$);
- Frequency window: $\pm 1\text{Hz}$ (can be calibrated $\pm 1\text{Hz}$ to $\pm 6\text{Hz}$).

Overload

In order to guarantee the maximum of service continuity, the static switch does not have protection for overload. This allows the compatibility with any type of system, commissioning to protection devices, externally installed, the selectivity ensuring.


The UPS Static switch is sized to support the following overloads:

- 110% for 60 minutes
- 125% for 10 minutes
- 150% for 1 minute

The short-circuit capacity may also vary according to the load (see the table in the Technical Data section).

7. CONTROL PANEL

The control panel located at the front of the equipment may be used to monitor and control all the parameters of the UPS and the batteries connected to it. The operating status of the UPS is shown on a liquid crystal display (LCD), with two rows of 40 characters and four LEDs with three operating states: On (steady), On (flashing), and Off.

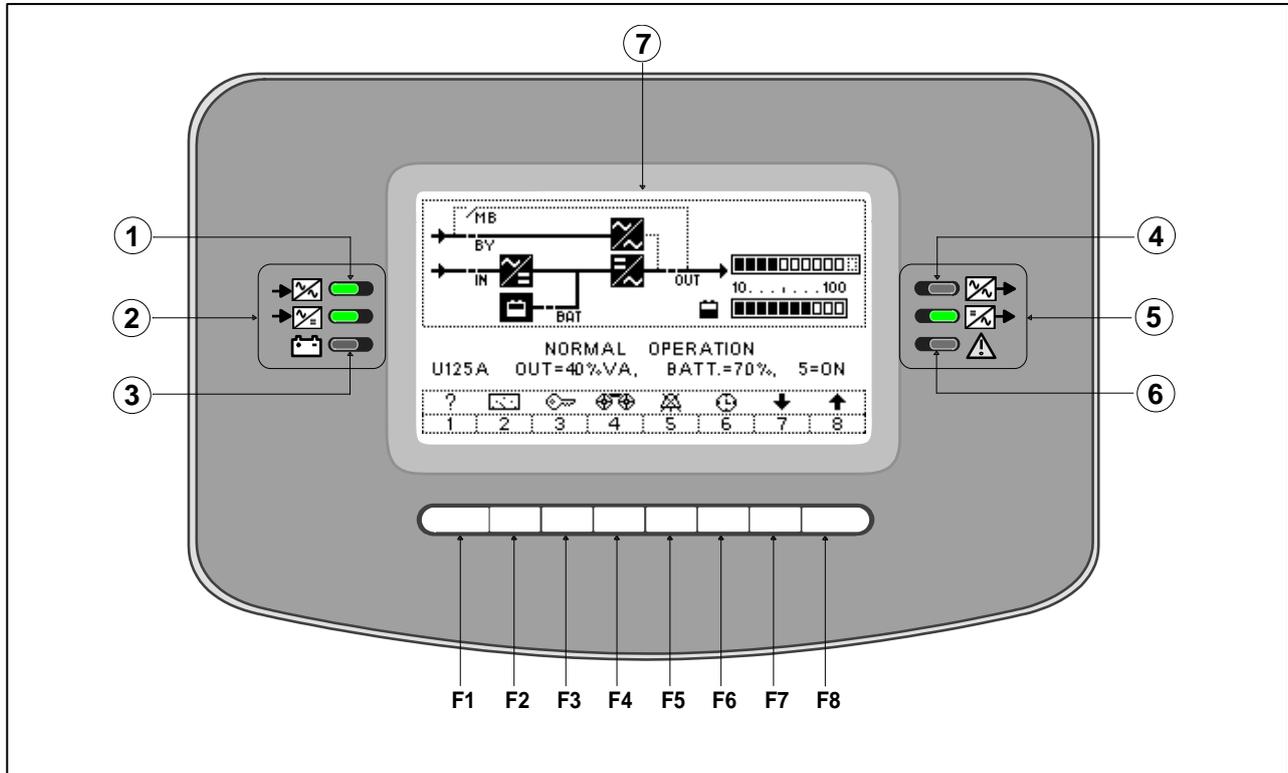

- | | |
|-----------------------------------|--------------------------------|
| ① LED Bypass input line indicator | ④ LED bypass output |
| ② LED Mains input line indicator | ⑤ LED Normal output |
| ③ LED Battery indicator | ⑥ LED Alarm for internal fault |
| | ⑦ Graphic display |

F1, F2, F3, F4, F5, F6, F7, F8: FUNCTION KEYS


The function of each key is shown at the bottom of the display screen and varies according to the menu displayed.

The display shows the event history log up to 120; the measurements and associated alarms are recorded for each event. The messages are available in the following languages: Italian, English, French, German, Spanish, Portuguese, Dutch, Swedish, Polish, Hungarian, Turkish, Czech,

Measurements

- Input voltage and frequency
- By-pass voltage and frequency
- Input power
- Output voltage and frequency
- Output power
- Output power peak
- Battery voltage
- Battery recharge/discharge current
- Inverter input voltage
- Internal temperature (logic control, rectifier, Inverter, static switch and magnetic components)
- Sine wave view of the following signals :

- Input Current /Output Current
- Input Voltage/ Output Voltage

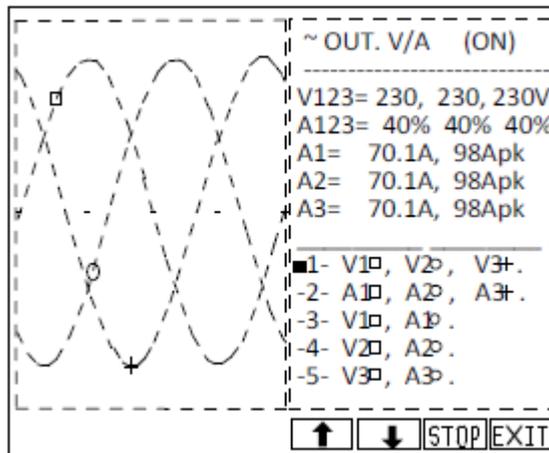

- Hours of operation on inverter
- Hours of operation on by-pass
- Hours of operation on battery
- Battery actuation time
- Number of complete battery discharges

Messages

The alarm messages are the following:

<i>DISTURBANCES ONBY-PASS LINE</i>	Presence of disturbances on the by-pass line.
<i>MANUAL BY-PASS SWITCH CLOSED</i>	The manual maintenance by-pass switch is closed.
<i>INCORRECT BY-PASS VOLTAGE OR SWBY, FSCR OFF</i>	The line voltage or frequency is outside the limits or the switch is open.
<i>INCORRECT VOLTAGE SUPPLY OR SWIN OFF</i>	The rectifier power supply voltage is outside the limits or the rectifier is faulty.
<i>PREALARM FOR MINIMAL BATTERY LIFE</i>	The battery is discharging and has reached the minimum back-up time value (can be calibrated).
<i>BATTERY TEST FAILED OR BATTERY SWITCH OPEN</i>	The battery test has failed or the battery switch is open.
<i>SUPPLY VOLTAGE LOW</i>	The battery voltage is below the preset limit.
<i>OUTPUT OVERLOAD</i>	The load connected to the inverter has exceeded the nominal value in kVA.

LOAD SUPPLIED BY BY-PASS PER MINIMUM LOAD	When the load is less than the value set by the operator, it is transferred onto the bypass line.
INTERNAL DAMAGE number	Internal fault, details of the alarm are provided by a code.
LOAD TEMPORARILY ON BY-PASS	The load is temporarily on the bypass due to inrush current or inverter start-up.
LOAD ON BY-PASS DUE TO OUTPUT OVERLOAD	Load on bypass due to exceeding of the inverter overload limits.
ACTIVE BY-PASS COMMAND	Load forced onto bypass.
REMOTE COMMAND FOR BY-PASS: ACTIVE	Load forced onto by-pass by a remote command.
OVERLOAD TEMPERATURE OR VENTILATION DAMAGED	The temperature inside the cabinet has exceeded the maximum limit due to too high ambient temperature or ventilation fault.
INPUT PHASE SEQUENCE INCORRECT	Indicates that the sequence of the input phase is incorrect.
MISSING OUTPUT VOLTAGE	Alarm when the output voltage is not present because the SWOUT and SWMB are open at the same time.
AUTO-OFF Timer: Toff= 0: 0', Ton= 0: 0'	Setting of the date and time of automatic UPS start-up and shutdown.

8. DISCONNECTING SWITCHES

The UPS is equipped with four switches under load located on the front of the cabinet that can be accessed by the opening of the door:

- Rectifier input;
- By-pass mains input;
- Output load;
- Maintenance by-pass.


The battery switch is located in the battery cabinet or in a wall panel.

9. COMMUNICATION

The alarms, commands and the communication software supplied together with the UPS to interface the unit with the system are listed below.

If these are not sufficient, please see the Options chapter.

Two DB9 connectors are available for RS232 connection; these outputs can be connect to a remote computer or to a Modem.

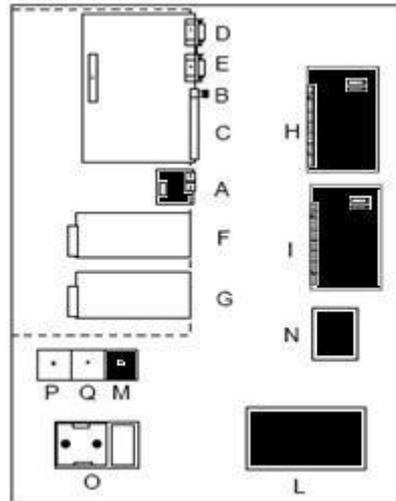

Interface card with connectors for signals and remote commands.

A- PARALLEL (optional)	H- REMOTE ALARMS (optional)
B- EPO (emergency power off)	I- REMOTE ALARMS (optional)
C- REMOTE	L- MODEM (optional)
D- RS232-1	M- battery temperature sensor (optional)
E- RS232-2	N- UGS (optional)
F- SLOT 1 (main)	O- 230V-auxilliary outlet
G- SLOT 2 (aux)	P- SWOUT aux
	Q- SWMB aux

9.1 Report Signals

These are provided by means of voltage-free relay contacts (the maximum capacity of the contacts is 1 A – 42 V):

- Battery low;
- Battery discharged;
- Load on by-pass or UPS fault.

9.2 Commands

The following commands in the UPS can be activated by means of an external voltage at +12V:

- ON/OFF Inverter (Such alarm can be modified as listed on pages 24-25);
- Complete shutdown of the UPS.

This signals reporting can be set.

9.3 Emergency Power Off (E.P.O.)

In the event of an emergency the UPS can be completely shut down by an external command.

9.4 Monitoring and control software

The system is provided with **Powershield³** monitoring and control software with the following features:


- Event chronology;
- Total events management;
- E-mail, modem, SNMP Agent support;
- Sequential shutdown of all the PCs in the network, saving the active work of the most varied applications.

10. UPS CABINET

The cabinet is made in galvanized steel with degree of protection IP20 even with the front door open. In addition, on request, different versions with higher protection degrees are available.

The forced ventilation is ensured by means of fans at the top; air intake is from the front, and output is from the top.

The parts with greater dissipation, such as the power modules and magnetic parts, are monitored by temperature sensors.

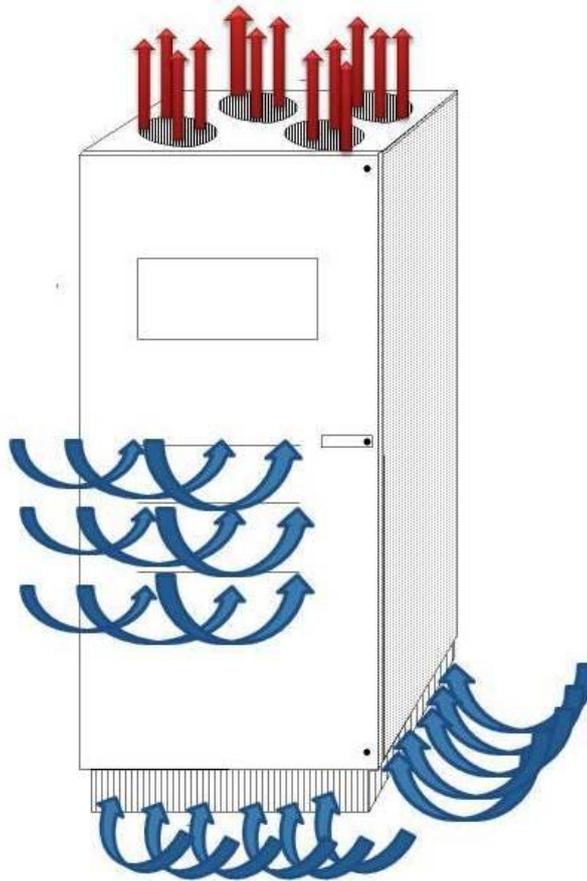

Air flow through the UPS

11. INSTALLATION

The UPS are designed to allow all the regular and extraordinary maintenance operations from the front, thus making back or side access superfluous. The cables input is from the bottom, and optionally can be possible require the cable entrance from the top.

Pallet lifters may be used to move the systems.

12. OPTIONS

12.1 Communication

The software **Powershield[®]** is a centralized management program used by the UPS that operates through the SNMP communication protocol. It is an ideal instrument for EDP manager in medium and large scale Data Center.

The main features are the following:


- Display at various levels of geographical areas, building plans, maps.
- Multi-user accesses with several levels of safety.
- Compatible with standard RFC 1628 SNMP agents.
- Creation of graphics and saving on file for physical input and output values.
- Alarm notification via e-mail and SMS.
- Integrated Wap Server for the display of the alarms.
- Suitable for operation with Windows operating systems: (98, ME, NT, 2000, 2003, Xp and Vista) Linux, Mac OS X, Solaris 8 and 9.

Hardware

Two slots are available inside the device, at the bottom, to house two of the following communication options:

- NetMan 102 Plus:** network agent for the management of the UPS connected directly on the LAN 10/100Mbps using the main protocol of network communication (TCP/IP, HTTP and SNMP). A MODEM can also be connected to the same device.
- Netman 202 Plus:** network agent like Netman 102 Plus, but improved with USB host, SNMP v1 and v3, maximum expandability and firmware upgradeable via USB port FTP and http.
- MultiCom 302:** Modbus/Jbus protocol converter by means of RS232 or RS485 output for the monitoring of UPSs in BMS (Build Management System). It also manages a second independent RS232 serial line that can be used to connect other devices such as NetMan Plus or a PC.
- MultiCom 352:** a device that makes it possible to connect two devices to a single UPS serial port. It can be used in all cases where several serial connections are required for multiple interrogation of the UPS.
- MultiCom 401-Profibus:** an accessory that make it possible to connect the UPS to a mains that uses the Profibus DP communication protocol.

The communication cards can be used simultaneously in various combinations to achieve greater flexibility and therefore enhanced services, as can be seen in the following example

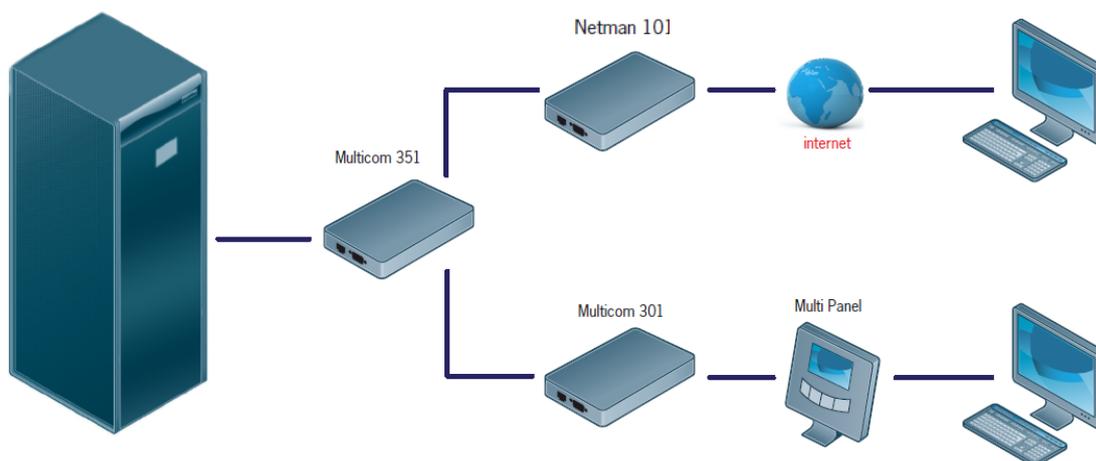

In addition to the cards above mentioned the following communication options are available:

- f) **Contact card with programmable power relay** (5A-250V) for connecting a remote control device. The following default alarm signals are available:
- Load on inverter;
 - Load on mains power;
 - Low battery;
 - Overload;
 - Over-temperature;
 - Load on maintenance by-pass.

There are also two programmable inputs (24VCA) for: "battery charge inhibition" and "by-pass inhibition" that can be used when is connected a generator-set.

The UPS is predisposed to house two alarm cards, having so up to 12 programmable alarms and 4 inputs. The settable alarms are listed in the following table:

ALARM	DESCRIPTION
INTERFERENCE ON BYPASS LINE	Disturbance on the bypass line (e.g. voltage peaks, harmonic distortion etc.) while the voltage and frequency values remain within acceptable limits. The inverter is not synchronized with the mains power supply.
MANUAL BY-PASS, SWMB-ON	SWMB Manual by-pass switch is closed
FAULTY BY-PASS VOLTAGE or SWBY, FSCR OFF	This alarm is present if the input voltage of the bypass line is not correct, or the SWBY switch is open.
FAULTY MAINS SUPPLY VOLTAGE or SWINOFF	The voltage supplied to the rectifier is incorrect or the SWIN switch is open. The battery is in discharge mode.
PRE-ALARM FOR LOW BATTERY VOLTAGE	The battery voltage is below the calculated value to furnish about 5 minutes of autonomy; the pre-alarm value is settable.
DISHCHARGED BATTERY OR BATTERY SWITCH (SWB) OPEN	The battery is discharged or the switch is open.
LOW POWER VOLTAGE or OVERLOAD	The power voltage is lower than the nominal value or there is an output overload.
OUTPUT OVERLOAD	The inverter is overload status.
BY-PASS FOR OUTPUT VA < AUTO_OFF VALUE	This alarm is present when the power expressed in %VA, absorbed by the load is lower than the "AUTOOFF" value. (function to be activated when the system is powered up).
INTERNAL FAULT: number	An internal anomaly is present
TRANSITORY BY-PASS	The load is powered temporarily by the bypass line (e.g. for transitory current peaks)
BY-PASS FOR OVERLOAD ON OUTPUT	The load is powered by the bypass line for overloads on the inverter in excess of the set limits.
BY-PASS COMMAND ACTIVE; DISABLED.	This alarm indicates when the load is forced over to the bypass line using a command on the front panel. The inverter is switched off.
REMOTE COMMAND FOR BY-PASS: ACTIVE/DISABLED.	This alarm indicates when the load is forced over to the bypass line via a remote command. The inverter is switched off.
OVERTEMPERATURE or FAULT ON FANS.	This alarm indicates an internal overtemperature caused by an increase in environment temperature outside the set limits or due to malfunctioning of the fans.
FAULTY INPUT PHASE SEQUENCE	The input sequence phase for the by-pass line is incorrect.
OUTPUT SWITCH AND MANUAL BY-PASS SWITCH OPEN	This alarm indicates when there is no output voltage due to the simultaneous opening of the SWOUT output switch and the SWMB manual bypass switch.


ALARM	DESCRIPTION
ACTIVE/DISABLED SHUTDOWN COMMAND.	This alarm indicates when the shutdown command (Rectifier+Inverter+By-pass) has been activated on the front panel or through the connection of the RS232 interface (Powershield ³).
REMOTE SHUTDOWN COMMAND: ACTIVATED/DISABLED.	This alarm indicates when the shutdown command (Rectifier+Inverter+By-pass) has been activated via remote contact.
CHANGED MEMORY: CODE = NUMBER	Indicates that the system settings have been changed.
BATTERY OVERTEMPERATURE	The temperature in the battery cabinet has exceeded the set limits.
BATTERY TEST FAILED	The battery test has encountered a battery fault
FAULTY FAN ALARM	This alarm indicates a faulty fan inside the system (optional function - on request).
FAULT FUSE	This alarm indicates one or more faulty fuses inside the system (optional function - on request).
FAULT ON PARALLEL CONNECTION	The parallel connection has been interrupted or is disconnected
AUTO-OFF Timer: Toff= 0: 0', Ton= 0: 0'	This alarm indicates when the daily timer comes in function set for the automatic UPS start-up and shutdown. If required this function is enabled at start-up.

- g) Multi I/O Card:** an accessory mounted inside the UPS that converts external signals from the UPS (e.g. ambient temperature, battery room temperature, etc.) into signals by means of relay contacts or on an RS485 serial output in MODBUS protocol.

12.2 Remote graphic panel

Graphic remote panel gets available remotely on the Graphic Display the information on the UPS status, the measurements and the alarms. In addition it is fitted a RS485 port which gets available the same information in JBUS/MODBUS protocol for the BMS.

The max distance between the UPS and remote panel is approx 300 m

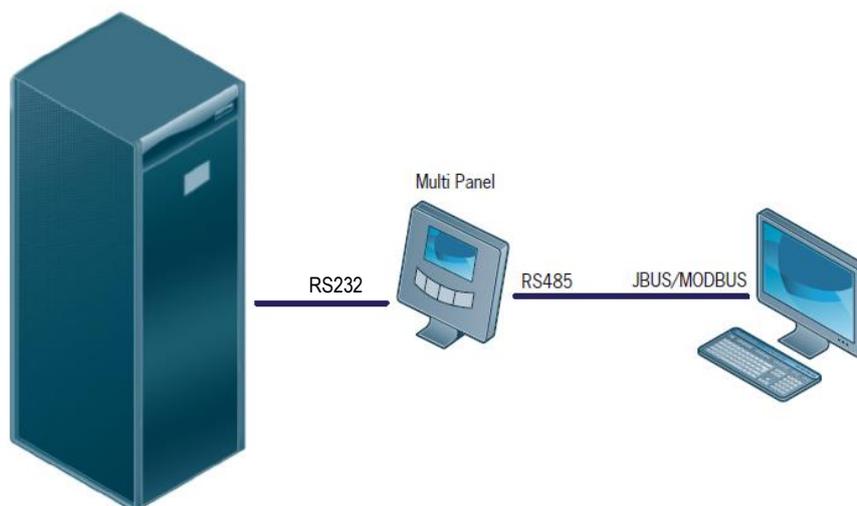


12.3 Battery cabinet

The battery cabinets are available with the following characteristics:

- protection fuse and switching disconnectors;
- Protection degree IP20 with frontal door open;
- Complete with batteries or empty with connection cables between the compartments (cells).

The size is (LxWxH): 860 x 800 x 1900 mm, weight 200 Kg (empty).

Such battery cabinets can be connected in parallel to reach the required autonomy; for more than 2 in parallel it is advisable to add a single module cabinet where the paralleling of the cables can be connected. Below an installation example is provided:

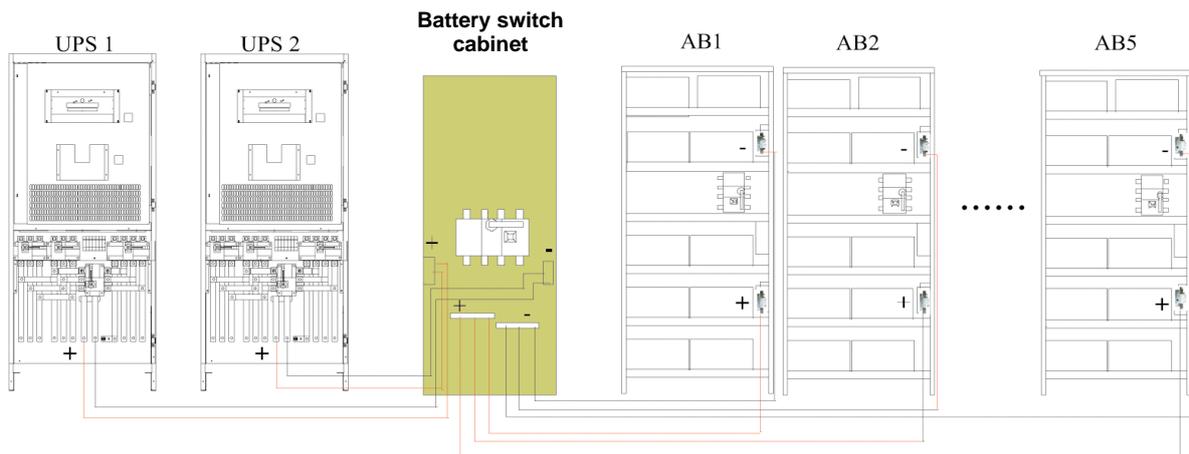

This device makes it possible to switch on the UPS even in the event of a mains failure using only the battery energy.

12.4 UGS - UPS Group Synchronizer

This allows 2 systems connected in a “**DUAL BUS**” configuration to keep synchronized with each other for any variation in the mains voltage, including total failure. The UGS also allows an GTEC UPS to be synchronized with another power source or to an independent non GTEC UPS system, even one of a different power rating.

The UGS box is designed to be wall-mounted:

- Dimensions (L x W x H): 150 x 70 x 110 mm
- Weight: 2 Kg

12.5 PSJ - Parallel Systems Joiner

This allows two UPS units to be connected in parallel, with the system on (without interrupting output) by means of a power coupling switch in accordance with the system indicated in Chapter 4 (**Dynamic Dual Bus System**).

The PSJ box is designed to be wall-mounted:

- Dimensions (L x W x H): 300 x 220 x 120 mm
- Weight: 2 Kg

12.6 Isolating transformers

Cabinets with a delta/star bypass isolation transformer are available. Such transformers can also be used to recreate the power supply neutral where this is not present.

In the case of installations with external maintenance bypass, contact the commercial office.

12.7 Kit for UPS without input and output neutral

The UPS requires input neutral to work correctly. In applications where the neutral is not available in input and is not required in output, a dummy neutral can be created using this kit.

This device is used **only for reference to the internal logic** and not for the supply of power.

12.8 Protection levels


The UPSs can be provided with levels of cabinet protection over IP20 in accordance with standard EN 60529.

12.9 Environmental sensors

The environmental sensors are devices to be connected to the communication card Netman 101 plus or to a NetMan 102 plus, in order to monitor the temperature and humidity of the environment and they have equipped with digital inputs and outputs opportunely settable.

The available sensors are:

- Temperature: detects ambient temperature
- Humidity & temperature: detects percent of relative humidity and ambient temperature in °C.
- Digital I/O & Temperature: detects the environment temperature in degrees °C and is equipped with a digital input and output.

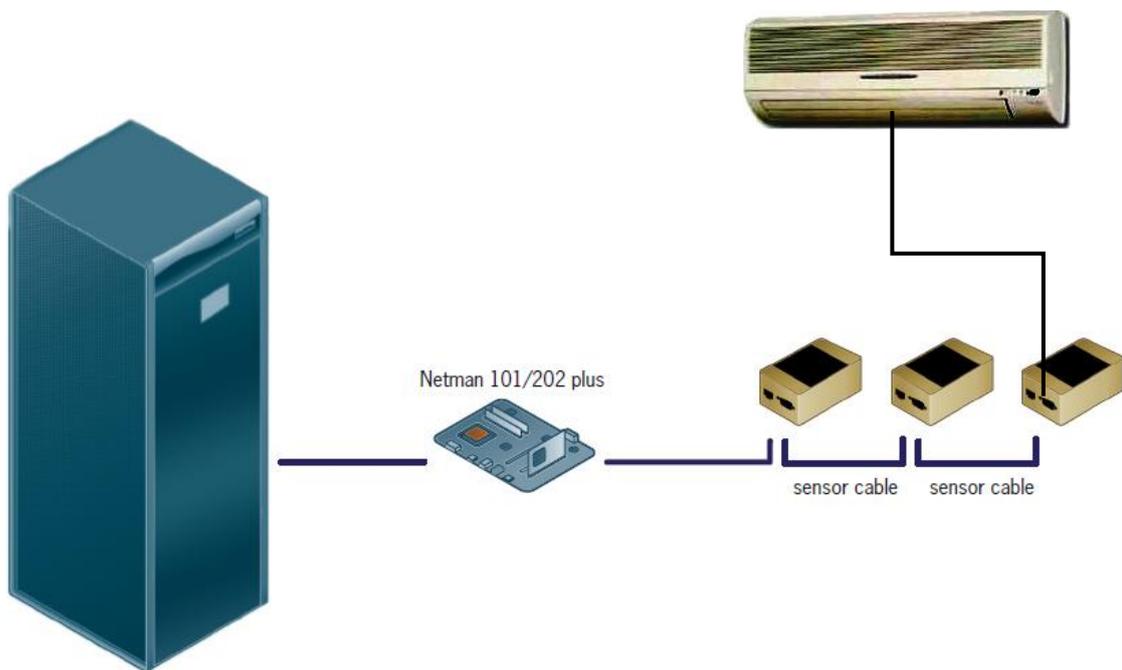

12.10 Fan Failure monitoring

In addition to the standard internal temperature control, the LIBRAPRO series can also be fitted with a device for monitoring the operation of each individual fan. In the event of a fault, an alarm shows on the front panel of the system via relay contacts and software.

13. ENVIRONMENTAL REQUIREMENTS

Ambient temperature for the UPS	0 ÷ 40°C
Maximum temperature for 8 hours a day	40°C
Average temperature for 24 hours	35°C
Recommended battery temperature	20 ÷ 30°C
Humidity	95% (without condensation)
Maximum operating altitude	up to 1000 m s.l.m. (1% of derating every 100 m between 1000 and 4000 m)
Storage temperature	-20° up to 70°C (UPS) / -20-30°C (for battery)

14. TECHNICAL DATA

Mechanical Characteristics (Std IP20)	UPS Power (kVA)			
	100	120	160	200
Width (mm)	800			
Depth (mm)	800			
Height (mm)	1900			
Weight (Kg)	620	650	730	830
Ventilation	Forced through internal ventilators			
Level of cabinet protection	IP20 (higher levels of protection on request)			
Input cables	From the bottom			
Colour	RAL 7016			

Mechanical Characteristics (IP42 Model)	UPS Power (kVA)			
	100	120	160	N.A.
Width (mm)	950			
Depth (mm)	1090			
Height (mm)	2100			
Weight (Kg)	660	740	840	-----
Ventilation	Forced through internal ventilators			
Level of cabinet protection	IP42			
Input cables	From the bottom			
Colour	RAL 7016			

Electrical Data	UPS Power (kVA)			
	100	120	160	200
INPUT				
Nominal voltage	400 Vac 3 phase without neutral			
Input voltage tolerance with battery recharge (100%load)	+20%, -10%			
Input voltage rectifier range	+20%, -25%			
Input frequency tolerance	From 45 to 65 Hz			
Nominal current absorbed (400 V) (A)	176	211	279	349
Nominal power absorbed (400 V) (kVA)	122	146	194	242
Maximum current absorbed at full load and battery recharging (A)	218	262	348	436
Power factor at nominal voltage (400 V) and battery charged from 25% to 100% of the load (std IP20)	>0,9			
Power factor at nominal voltage (400 V) and battery charged from 25% to 100% of the load, on IP42 model	Load >= 25% PF>0,75 , Load >= 50% PF>0,85 Load >60% PF>0,9			
Input current harmonic content (rated input voltage THDV ≤2%) Standard / with optional 5th harm.opt.filter				
• load 25% , load 50%	≤70 / ≤17 , ≤45 / ≤10			
• load 75% , load 100%	≤35 / ≤7 , ≤30 / ≤5			
Progressive start of rectifier (Power Walk-in)	from 0 to 30 seconds (can be configured)			
Delay of Progressive start of rectifier (Power Walk-in delay timer)	from 0 to 120 seconds (can be configured)			
D.C. INTERMEDIATE CIRCUIT				
Number of Pb elements (see note 1)	198			
Float voltage (2,26 V/el., can be calibrated) – Vdc	447,5			
Recharge Voltage (2,35 V/el., can be calibrated) – Vcc	465,3			
Maximum output voltage (Vcc)	470			
End of discharge voltage Vcc (1,64 V/el, can be calibrated) - Vcc	325			
Ripple current with recharged battery (%)	0			
Voltage Compensation function with the battery temperature probe, (V per °C)	-0,11%			
Maximum current to charge battery with 240 elements (A) (mains voltage 400V)				
• Load 100%	20	25	35	45
• Load 90%	40	50	65	80
• Load 80%	60	75	100	125
• Load ≤ 70%	80	95	125	155

Electrical Data	UPS Power (kVA)			
	100	120	160	200
INVERTER				
Rated Power ($\cos\phi$ 0,6 ÷ 0,9 lag)	100	120	160	200
Rated power at $\cos\phi$ 1 (KW)	90	108	144	180
Nominal Current (A)	144	173	231	289
Nominal voltage	400 Vca 3 phase + N (configurable from 380 V to 415 V)			
Nominal frequency	50 to 60 Hz (configurable)			
Nominal voltage regulation field	-360 V, +420 V			
Static variation	±1%			
Dynamic variation	±5%			
Restor time within ± 1%	20 ms - Conform To the standard EN 62040-3, class 1			
Crest current factor (I_{peak}/I_{rms} as per EN 62040-3)	3:1			
Voltage distortion with linear load	2% (max)			
Voltage distortion with non-linear load (EN 62040-3)	<3%			
Frequency stability with synchronized inverter to the by-pass network.	±2% (can be regulated from ±1% to ± 6% from the control panel)			
Frequency stability with not synchronized inverter to the by-pass line	±0,05%			
Speed of frequency variation	1Hz/sec (see note 2)			
Phase voltage asymmetry with balanced and unbalanced load	≤ 1%			
Phase displacement of the voltages with balanced and unbalanced loads.	120 ± 1 °el			
Overload in referred to the nominal power <ul style="list-style-type: none"> • Three phase • Monophase 	110% for 60 minutes, 125% for 10 minutes, 150% for 1 minute 200% for 6 seconds			
Short-circuit Current <ul style="list-style-type: none"> • Phase / Phase • Phase / Neutral 	180% for 1 second depending on current 300% for 1 second depending on current			
Inverter efficiency (%) from battery	95%			

Electrical Data	UPS Power (kVA)			
	100	120	160	200
BY-PASS				
Nominal voltage	400 Vca 3fase + N (configurable from 360 V a 420 V)			
Nominal voltage tolerance	± 15% (can be regulated from ± 10% to ± 25% from the control panel)			
Nominal frequency	50 or 60Hz (auto-sensing)			
Frequency tolerance	± 2% (can be regulated up to a ± 6% from the control panel)			
Switching onto by-pass with Inverter synchronized (UPS in "Normal Mode")	Approx. 0 ms			
Switching onto by-pass with non-synchronized Inverter (UPS in "Normal Mode")	20 ms (see note 3)			
Switching from by-pass to Inverter (UPS in "Stand-by On mode")	from 2 to 5 ms			
Delay in transferring to Inverter after the switching onto by-pass	4 sec			
Overload Capacity of by-pass line (kVA)	110 % for 60 minutes, 125 % for 10 minutes, 150 % per 1 minute			
Short circuit capacity of by-pass line (x nominal voltage) I/In				
• 1 second	12	10	7,5	9,5
• 500 ms	13	11	8	10,5
• 200 ms	14	13	9,5	12,5
• 100 ms	16	14	10,5	13,5
• 10 ms	22	20	15	19,5

Electrical Data	UPS Power (kVA)			
	100	120	160	200
SYSTEM				
AC/AC efficiency (On line) – (%)				
• Full load	92,5	92,5	93	93
• Load 75%	93	93	93,5	93,5
• Load 50%	93	93	93,5	93,5
• Load 25% Std IP20 model	92	92	93	93
• Load 25% IP42 model only	91,5	92,4	92,5	-----
Efficiency with UPS in STAND-BY mode	98 %			
Neutral Sizing (I/In)	1,73	1,44	1,73	1,38
Heat Losses (KW) % load				
• 100	7,3	8,8	10,8	13,5
• 75	5	6,1	7,5	9,4
• 50	3,4	4,1	5	6,3
• 25	2	2,3	2,7	3,4
Maximum current dispersion	300 mA maximum			
Noise level at 1m from the front (from 0 to full load) - (dBA)	65		68	

Notes:

- (1) Number of Pb elements allowed is: 192 – 204. In each case the end of discharge voltage may not be less than 316 V.
- (2) The parallel version can be calibrated from 0,1 to 1Hz/s.
- (3) Can be calibrated from 10 to 100 ms or with inhibition of transfer onto bypass.

www.gtec-power.eu