



GTEC UPS MODEL:

SATURN 160-200 kVA

160/200 kVA THREE-PHASE/THREE-PHASE
On Line Double Conversion Technology (VFI)

TECHNICAL SPECIFICATIONS

CONTENTS

| | | |
|--------|---|----|
| ..1.. | OBJECTIVE | 1 |
| ..2.. | SYSTEM DESCRIPTION | 1 |
| ..3.. | REFERENCE STANDARDS | 2 |
| ..4.. | APPLICATIONS | 3 |
| ..5.. | CONFIGURATIONS | 4 |
| ..6.. | UPS DESCRIPTION | 6 |
| | > 6.1 PFC Converter (Zero Impact Source) | 8 |
| | > 6.2 Battery Charger (Battery Care System) | 9 |
| | > 6.3 Inverter | 11 |
| | > 6.4 Static Switch (Automatic Bypass) | 13 |
| | > 6.5 Smart Ventilation | 14 |
| ..7.. | CONTROL PANEL | 15 |
| ..8.. | ISOLATING SWITCHES | 18 |
| ..9.. | COMMUNICATION | 18 |
| | > 9.1 Emergency Shutdown (R.E.P.O.) | 21 |
| | > 9.2 External Synchronisation | 21 |
| | > 9.3 Monitoring and Control Software | 22 |
| | > 9.4 Configuration Software | 22 |
| ..10.. | UPS CABINET | 27 |
| ..11.. | OPTIONS | 27 |
| | > 11.1 Communication | 27 |
| | > 11.2 External Battery Temperature Sensor | 30 |
| | > 11.3 External Maintenance Bypass | 30 |
| | > 11.4 Battery Cabinets | 30 |
| | > 11.5 Additional Battery Charger | 31 |
| | > 11.6 Optional Transformers | 32 |
| | > 11.7 Separate Line Input | 35 |
| | > 11.8 Auxiliary Sockets | 35 |
| | > 11.9 Top cable entry | 36 |
| | > 11.10 Eyebolts kit | 36 |
| ..12.. | ENVIRONMENTAL CONDITIONS | 36 |
| ..13.. | TECHNICAL DATA 160-200 KVA | 36 |

1 - OBJECTIVE

These specifications define the technical characteristics of the **SATURN** uninterruptible power supply (UPS). The UPS is designed to supply a clean and stable electrical supply, irrespective of the condition of the mains or an alternative power supply.

The **SATURN** series of UPS is designed and manufactured by Gtec Europe srl, a leader in this field with a range of products from 650VA to 800kVA, and over 10 years of experience in power protection.

For more information please visit our website at: www.gtec-power.eu.

2 - SYSTEM DESCRIPTION

The **SATURN** UPS is available in 10-200 kW On Line double conversion technology. It meets the VFI-SS-111 classification defined by IEC EN 62040-3.

This UPS is designed to protect critical industrial and Information Technology (IT) systems with the following features:

- Zero Impact Source;

- Extremely low input current distortion and 0,99 input power factor;
- Power Walk-In and start-up delay to reducing generator oversizing; these features also help to guarantee supply compatibility where available mains power is limited.

- Battery Care System
 - two voltage level recharge according to the IU characteristic;
 - temperature compensating recharge voltage;
 - suitable for the charging of extended back-up battery sets with additional charger options;
 - Battery test function to detect potential battery deterioration
 - Cyclical recharge
 - "Commissioning charge".

- Output unitary pf (kW=kVA) means higher active power and capability to supply loads with $\cos \phi$ from 0,9 inductive to 0,9 capacitive, without power reduction;

- High performance design achieving a system efficiency greater than 96% (on-line mode); -

- Backfeed protection (Inverter disconnection or bypass line opening contactor);

- Multi-function case design to allow:
 - Easy operations to separate the bypass line from the rectifier line (cable jumpers);
 - Installation of additional charger for long back up time requirements.

This specification refer of the following models:

| <i>MODEL</i> | <i>DESCRIPTION</i> |
|-------------------|---|
| SATURN 160 | 160kVA/160kW three-phase input/three-phase output UPS |
| SATURN 200 | 200kVA/200kW three-phase input/three-phase output UPS |

3 - REFERENCE STANDARDS

Gtec Europe srl operates a Quality Management System certified to ISO 9001/2000 covering all company functions from design and manufacture to after sales services.

This certification is a guarantee for the customer with regard to the following aspects:

- use of quality materials;
- meticulousness in the production and testing phases;
- constant customer support.

In addition, the UPS meets the VFI-SS-111 classification (according to EN 62040-3) and complies with the following specific standards for UPS:

- **IEC EN62040-1**: Static uninterruptible power supplies (UPS): general and safety provisions;
- **IEC EN 62040-2**: Electromagnetic compatibility (EMC) requirements category C2
- **EN 62040-3**: Methods of specification of performances and test provisions;

This UPS series also satisfies the following general standards, where applicable:

- **IEC 60529**: Degree of protection provided by enclosures;
- **IEC 60664**: Insulation for low-voltage equipment;
- **IEC 60755**: General Requirements for Residual Current Operated Protective Devices;
- **IEC 60950**: General safety provisions for "Information Technology" equipment;
- **IEC 61000-2-2**: Electromagnetic compatibility immunity;
- **IEC 61000-4-2**: Electrostatic discharge immunity test;
- **IEC 61000-4-3**: Radio frequencies, electromagnetic immunity test;
- **IEC 61000-4-4**: Transitory overvoltage immunity test;
- **IEC 61000-4-5**: Overvoltage immunity test;
- **IEC 61000-4-11**: Voltage dips, short interruptions and voltage variations immunity test.
- **IEC 61000-3-12**: Harmonic current emissions (for equipment with rated current > 16 A ≤ 75)

European Directives:

LV 2006/95/EC

Low voltage Directive: contains provisions relating to equipment safety and imposes the EC marking obligation from 1/1/97.

EMC 2004/108/EC

Electromagnetic compatibility directive: contains provisions relating to UPS immunity and emissions in its installation environment and imposes the EC marking obligation from 1/1/96.

4 – APPLICATIONS

This UPS are suitable for applications requiring critical load protection including:

LAN, Server and Datacenters: the unitary output power factor ensures the highest active power availability for efficient UPS loading.

e-business and Telecommunications: parallel operation means that the installed UPS size can be increased (up to 6 units) to keep pace with the growth of the organisation.





Industrial processes and electro-medical systems: the UPS is designed to protect a range of loads, from industrial processes to electro-medical applications. This has been achieved through careful load analysis at the design stage of the project, to ensure the following characteristics (warning some Medical application have specific standard, so please check them before offer/install UPS)

- optimum input technical characteristics with zero impact on the power supply source
- high short circuit and overload capacity
- high battery recharge capacity with the option to use a variety of battery types (sealed valve regulated and open-vented) for long back-up times.

Emergency systems:

The UPS can be configured in accordance with standard EN 50171 (the Centralised Power Supply Systems) standard.

Over the battery type, the autonomy and recharge times, in accordance with standard EN 50171 may be selected 4 different modes of operation in order to adapt to all different system requirements.
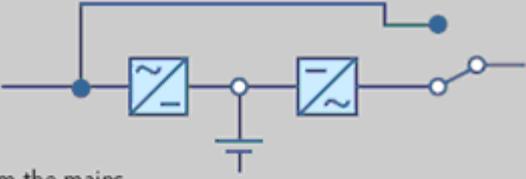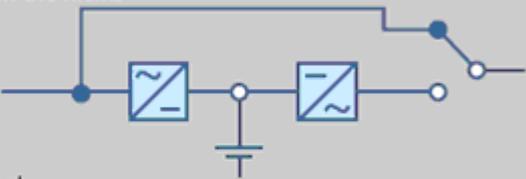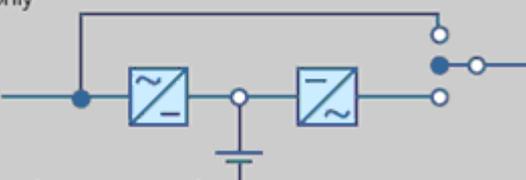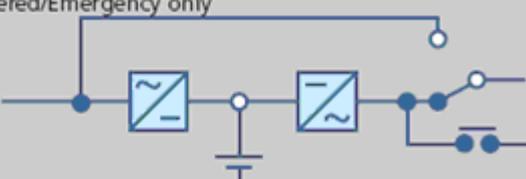
| <i>Operating modes (EN50171)</i> | <i>Configurations</i> |
|---|--|
| <p>1. Always powered</p>  | <p>The UPS operates in the following mode: ON-LINE (See chapter 6 "Ups descriptions")</p> |
| <p>2. Powered from the mains</p>  | <p>The UPS operates in the following mode: ECO-MODE (See chapter 6 "Ups descriptions")</p> |
| <p>3. Emergency only</p>  | <p>The UPS operates in the following mode: STAND BY-OFF (See chapter 9.4 "Configuration Software")</p> |
| <p>4. Always powered/Emergency only</p>  | <p>The UPS operates in the "ON LINE" MODE by using the ENERGYSHARE socket (See chapter 9.4 "Configuration Software")</p> |

Note:

EnergyShare socket is not available for Saturn 160-200.

Contact the factory for dedicated emergency light solution in accordance with the standard EN50171.

5 - CONFIGURATIONS

The available configurations are the following:

Single UPS

The UPS can be installed as a single, stand-alone UPS and this format is most commonly used for relatively straight forward installations. This can be expanded up to 6 units in order to meet load power demands or to introduce a level of redundancy.

Parallel configuration

Up to 6 UPSs can be connected in parallel to increase the power of the uninterruptible power system (power parallel) or to enhance its reliability (redundant parallel).

The system is defined as "redundant parallel" when the stoppage of one or several UPSs does not determine the loss of the power supply. All the UPSs power the load simultaneously with automatic sharing of the current.


The units exchange information on the operating status and the sync signals by means of the RS485 connections in loop with dual redundancy. This means that even in the event of the accidental interruption of both connections, only the UPS affected by this interruption cuts itself off, while the other one continues to operate without any interference.

Maximum communication cable length between two UPS should not exceed 50 meters keeping in mind that total length for the overall ring is 100 meters.

Standard communication cable, part of installation kit is 5 meter long for all Saturn range 10÷200; user may arrange for a longer cable (according with prescriptions above mentioned) using RJ45 standard cables available in the market.

The “**Hot System Expansion**” feature means that a new UPS can be added to the system while the other units are on-line and powering the load from the inverter.

The integrated UPS will configure itself automatically with the system data without any disturbance to the load.

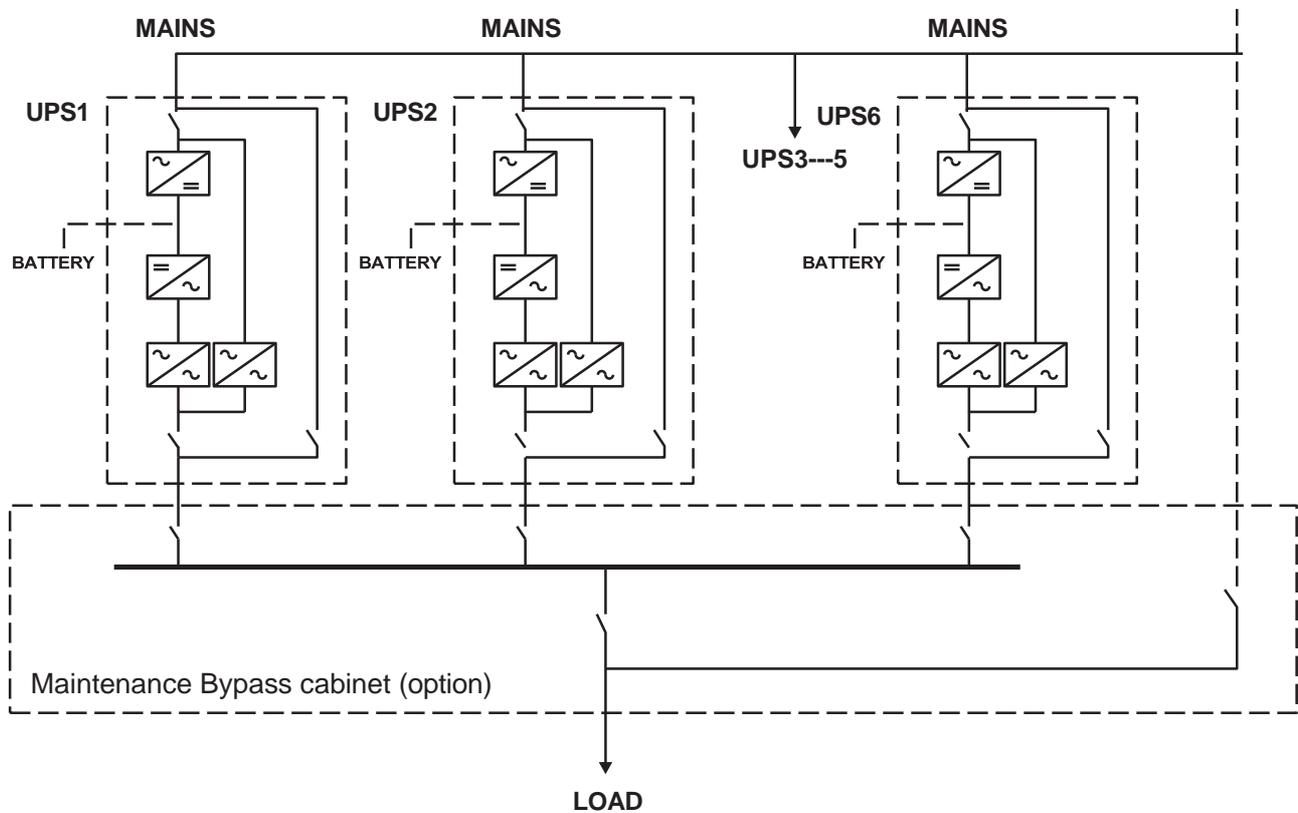

NOTE: for realizing a parallel configuration where is required a transformer connected downstream each single UPS please contact the manufacturer in advance.

6 - UPS DESCRIPTION

The UPS can be operated in four main operating modes: ON-LINE, FREQUENCY CONVERTER, ECO MODE and SMART ACTIVE and in their main variants described in following paragraph.

Mode: ON-LINE

Normal Operation: the rectifier, drawing power from the mains power supply, supports the Inverter and charges the batteries; the load is powered by the Inverter which provides a clean and secure supply, synchronised to the bypass supply.

Emergency Operation: if the mains power supply wanders outside the permitted input range (voltage and frequency), the rectifier is shut down and the Inverter is automatically powered by the battery set for the preset back-up time and without disruption to the load. When the mains power supply returns, the rectifier gradually starts up, charging the batteries and eventually powers the Inverter.

Operation from By-pass: if an Inverter overload exceeds permitted limits (or is manually shutdown), the load automatically transfers to the emergency bypass via the static switch and without disruption to the load.

Mode: FREQUENCY CONVERTER

The UPS can be configured as a frequency converter (with "UComGP"), therefore when the input frequency is 50Hz the output frequency can be 60Hz and vice versa. During this mode of operation the automatic by-pass is disable. The UPS can work in frequency converter mode with or without the batteries (must be set up with "UComGP").

Mode: ECO

The load is normally powered from the emergency bypass supply and the rectifier maintains battery charge. When the mains power supply wanders outside the permitted input range, the load is automatically transferred to the output of the Inverter until the mains power supply returns within range.

This mode is useful when powering loads that do not require the regulated no-break supply from the Inverter and allows the system to achieve an efficiency up to 99%.


Mode: SMART ACTIVE

When the UPS is configured to operate in SMART ACTIVE mode, it automatically selects whether to operate in ON-LINE or ECO mode.

The decision is made based on statistical calculations performed by the UPS and based on the quality of the mains and bypass supplies: if the latter remains suitable for a certain period, the unit selects ECO mode, otherwise it remains in ON-LINE mode.

Note: Saturn working in parallel configuration, may not operate in Eco mode and Smart Active mode.


The block diagram is as follows:

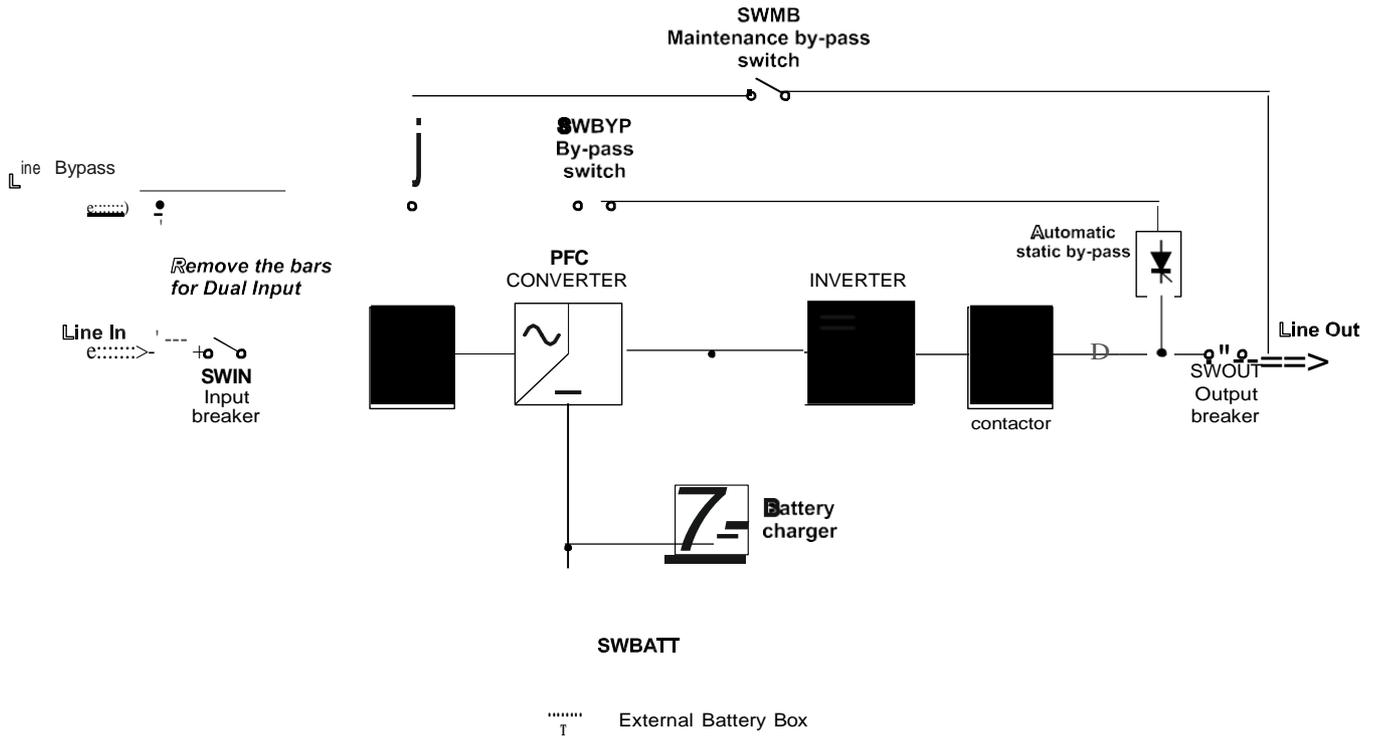

> 6.1 PFC CONVERTER (ZERO IMPACT SOURCE)

The PFC Converter converts the AC voltage into a DC supply to power the Inverter; if the mains or alternative power supply fails, the Converter will raise the battery voltage to a value suitable with which to power the Inverter. The PFC control technology using Digital Signal Processing (DSP) microprocessors and IGBT power semiconductors to achieve a low impact on the power supply source, low harmonic distortion and high input power factor. A zero impact on the supply source is achieved due to the following characteristics:




- **Negligible Input Harmonics:** upstream generators and transformers (including distribution) can be reduced due to the negligible input harmonic distortion and high input power factor > 0.99.
- **Delayed switching of UPS – t_0 - t_1 (Power Walk in-start Delay):** when the mains power supply returns, the UPS delays switching of the input stage for a period of time that can be set between 1 and 120 seconds. This function is particularly useful when the mains power supply returns after an interruption (or when the generator set is started) and the source must supply various UPS or, more typically, multiple users.
- **Progressive rectifier start-up – t_1 - t_2 (Power Walk-in duration):** when the mains power supply returns, absorption of the mains power supply progressively reaches the nominal value within a time period that can be set from 1 to 125 seconds. This function is normally disabled.

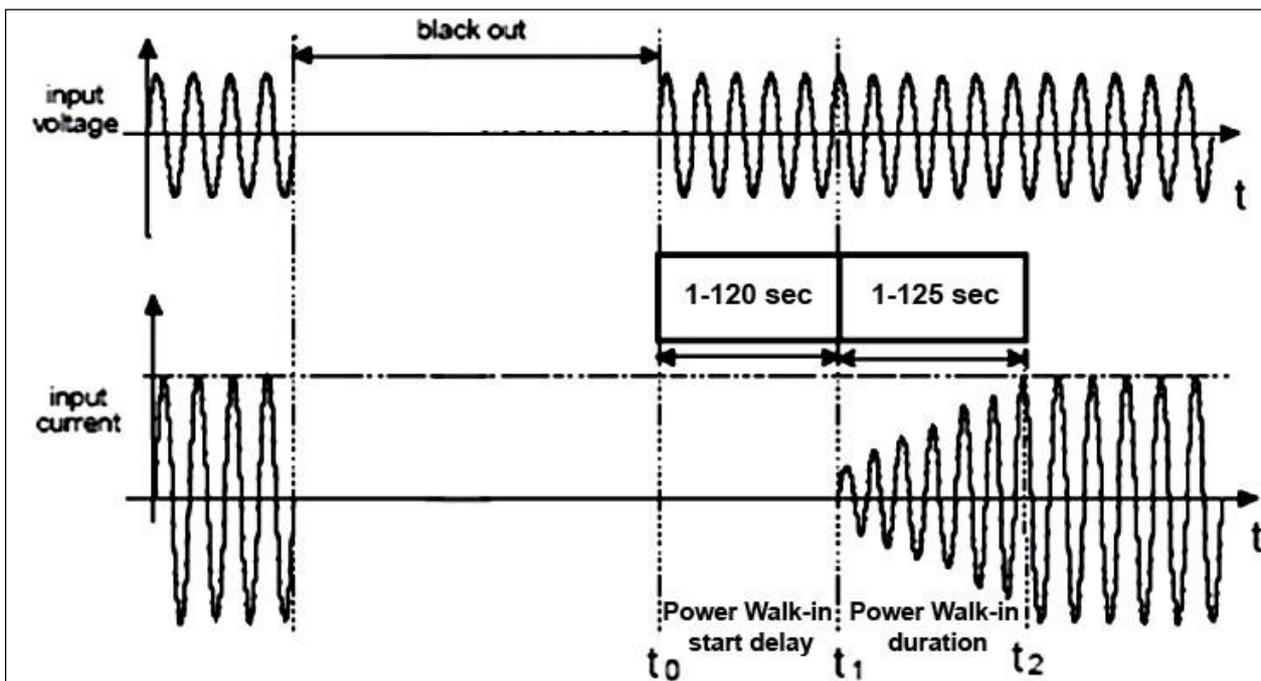

> **6.2 BATTERY CHARGER (Battery Care System)**

The "Battery Care System" is a set of functions arranged to help extend the working life the battery set and optimise its performance.

- **Battery recharging:** the UPS can be used with sealed lead batteries (VRLA), AGM, open-vented and NiCd batteries. According to the type of battery used two recharge methods are available:
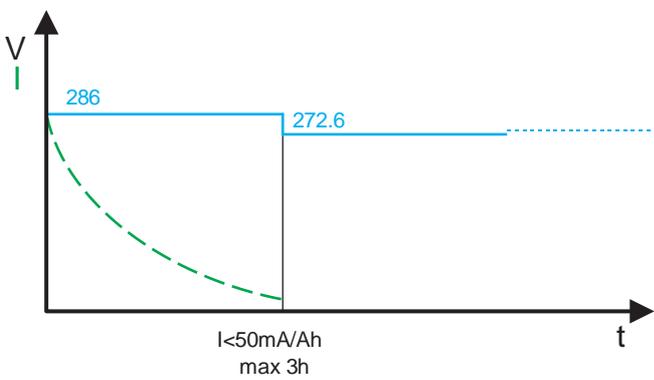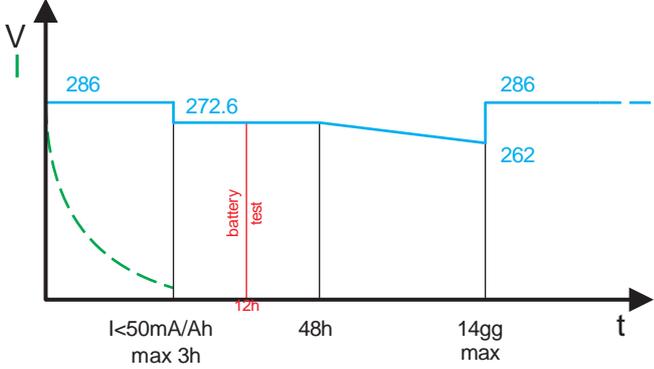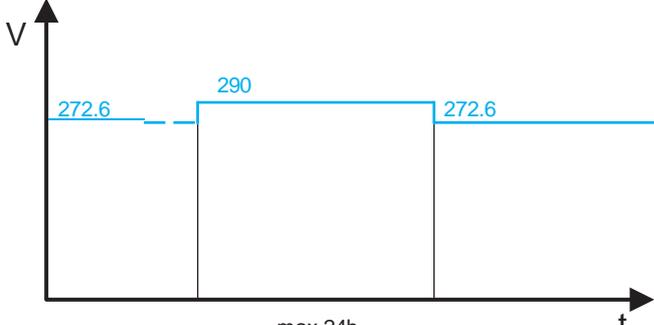
| Recharging modes (selectable by "UComGP") | Configurations |
|---|---|
|  | <p>Floating (standard configuration): the charge state of the battery is continuously monitored; when the mains power supply is present, the batteries are charged at a preset voltage level and limited current relative to the recharge time required and the capacity of the battery itself.</p> |
|  | <p>Two-level recharge (configurable): this recharge is at limited current with two levels of voltage. In the first instance, the process uses a quick charge voltage, whilst in the second stage a float charge. This type of charging is mainly used with open-vented batteries or other types when an accelerated recharge time is required.</p> |
|  | <p>Cyclical recharge: this recharge is sometimes recommended by battery manufacturers to prolong the battery life. It consists of battery charge and discharge cycles as indicated in the diagram.</p> |
|  | <p>"Commissioning charge": this charge method is useful every time new batteries are installed in the UPS. By increasing the voltage to 290 volts for a maximum of 24 hours, perfect equalisation of the battery charge is assured, thus guaranteeing a uniform discharge and wear of the battery monoblocks.</p> |

The various recharge methods and the present voltage values are defined using UComGP.

The presence of the external temperature sensor option will activate compensation of the voltage depending on the temperature with the battery backup voltage (272V for 20 battery blocks)

Battery test: during normal operation the battery is automatically tested at regular intervals. The battery test can also be manually activated. The test is performed to ensure a limited battery discharge and impact on overall life expectancy. If the test returns a negative result a warning is displayed on the UPS panel (or remote panel, if installed).

Protection against slow discharges: for long runtimes and low load discharges, the end of discharge voltage is raised to approximately 1.8V/eh as recommended by the battery manufacturers to avoid a deep discharge state.

Ripple current: recharge ripple current (residual AC component) is one of the most important causes of poor battery reliability and reduced operating life. The UPS battery charger is a high-frequency design with a negligible level of ripple current,

Battery recharge limit current: The battery recharge current is limited to a prefixed value of $C_{nom}/8$ (i.e. 12.5% C_{nom})

Cold-Start: This feature allows the Inverter to be switched on and the load to be powered by the battery, when the mains power supply is not present.

UPS without batteries: the UPS must always be operated with the batteries connected; if they are not connected alarms will be generated and the UPS will not be able to perform to specification.

> 6.3 INVERTER

The DC/AC Converter (Inverter) converts the direct current into a stabilised sinusoidal alternating current to power the load. When the UPS is in ON-LINE mode, the load is always powered by the Inverter.

The Inverter is an IGBT (Isolated Gate Bipolar Transistor) based three-phase design; the IGBT is a transistor that allows high commutation frequencies (8 kHz for this power range). Inverter design is three level T-NPC type by means of dedicated IGBT bespoke modules. as a result, the Inverter provides a high quality output voltage, with low noise levels and high operating efficiency. In addition, the DSP microprocessor controls, guarantee static and dynamic performance under any operating condition:

Voltage adjustment

The output voltage can be adjusted using the independent phase control and DSP microprocessor; this enables a better static and dynamic response. In detail:

- **static condition:** the Inverter output voltage remains within $\pm 1\%$ for all variations of the input voltage within the accepted limits;
- **dynamic condition:** for load variations from 0 to 100%, the output voltage remains within $\pm 3\%$, (within the values defined by class 1 of the EN 62040-3 standard).

Frequency adjustment

The Inverter output frequency is generated autonomously by an internal oscillator, in synchronisation with the bypass supply. Frequency stability is operating condition dependent:

Frequency stability

- With mains power present: the internal oscillator follows any frequency variations in the bypass supply and in relation to the present value - normally $\pm 5\%$ (configurable from $\pm 0,25\%$ to $\pm 10\%$).
- With no supply present: the Inverter autonomously generates the frequency of the output voltage with a stability of $\pm 0,01\%$.

Frequency variation speed

The maximum Inverter output frequency variation (to lock to that of the bypass supply) is 1Hz/s (adjustable from 0.5 to 2Hz/s).

Distortion of the output voltage

Inverter output waveform distortion with a linear load is maintained within $\pm 1\%$. Within a non-linear load, as defined by the EN 62040-3 standard (load applied 150kVA), output voltage distortion does not exceed $\pm 3\%$.

Overload

The inverter is sized to provide a power overload for a limited length of time (see the limits indicated in the **Technical specifications table**.)

When the time period or power limits are exceeded, the load is transferred to the bypass supply.

Short circuit capacity

If a current surge occurs whilst the UPS is operating, the Inverter will carefully analyse the output voltage and current in order to distinguish if the short circuit is genuine or an overload.

As for the overload limits refer to technical data table. In case UPS will detect short circuit ($V_{OUT} < 100$ volt) :

- During battery operation (bypass power supply failure), the Inverter can supply a current limited to 270% for 200ms and after that (if the short circuit is not yet cleared) additional 150% for 300ms.
- When the mains power supply is present, the Inverter will switch to bypass supplying the limited current for 1 sec (current $> 103\%$ and output voltage < 160 Volt). Unlike, if current is greater than 150%, but voltage within the limit (> 160 Volt), UPS will not discriminate the short circuit, continuing to feed the load for one minute; during this time upstream or downstream protections outside UPS should be able to blow up.

The table below recommends the sizing of the various protection devices located downstream of the UPS in order to guarantee their selectivity even in the event of a power failure:

| Output protections (values recommended for selectivity) | |
|---|---------------------------|
| rapid fuses (GI) | I_n (Nominal current)/7 |
| Magnetothermal switches (Curve C) | I_n (Nominal current)/7 |
| Ultra-rapid fuses (GF) | I_n (Nominal current)/2 |


Output voltage symmetry

Under all conditions, output voltage symmetry is maintained within $\pm 1\%$, for balanced loads and $\pm 2\%$ for unbalanced loads of 100% (e.g. one phase with nominal load, the other two with no load).

Phase shift angle

The three-phase Inverter output voltages have a guaranteed phase separation angle of $120^\circ \pm 1^\circ$ for balanced loads and 100% for unbalanced loads.

Performance of a 3-phase Inverter Saturn 160÷200 with reactive loads

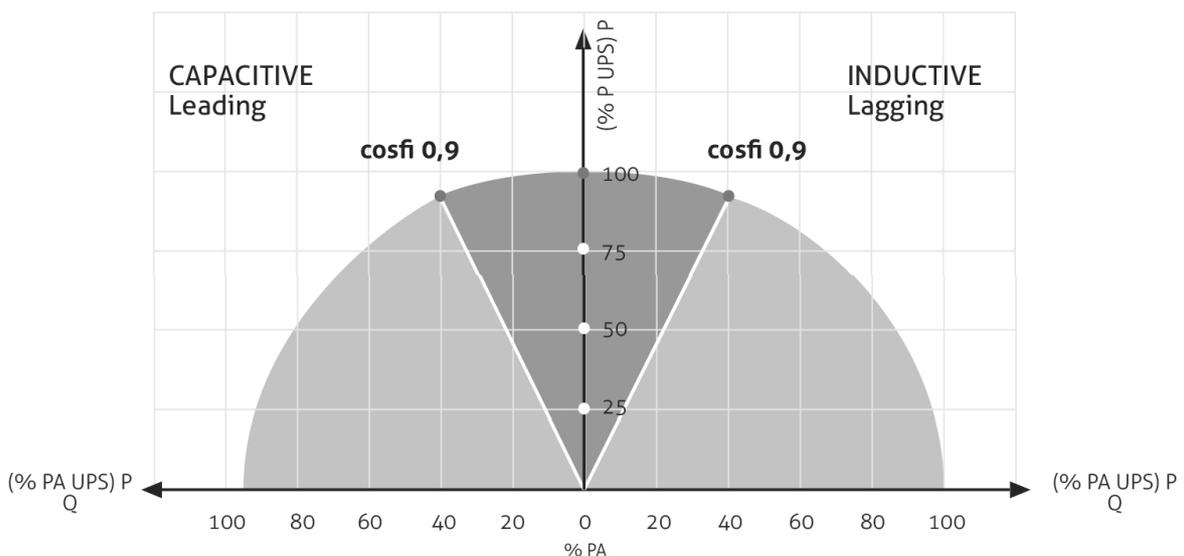

> 6.4 STATIC SWITCH (Automatic Bypass)

A static switch is an electronic device that can automatically transfer the loads connected to the UPS to the bypass supply in an emergency for example when:

- the Inverter is shut down manually;
Inverter overload limits are exceeded;
internal over temperature limits are exceeded;
the Inverter fails;
DC voltage goes outside the permitted range.

If at the time of switchover, the inverter voltage is not synchronised with that of the auxiliary power supply, the transfer will take place with a delay of around 20ms; in consideration of the various types of loads, this delay can be set with "UComGP" (10÷100ms) or the switchover can be inhibited if there is no synchronism..

Emergency Supply Voltage

Transfer to the emergency supply only takes place if the voltage and the frequency are considered 'suitable' for the load and the limits for transfer can be set on-site by the UPS user.

- Voltage range: $\pm 10\%$ (settable from -20% to +15%);
- Frequency range: $\pm 5\%$ (settable from $\pm 0.25\%$ to $\pm 10\%$)

Overload

The static switch has no current fast protection devices to guarantee maximum continuity. Overcurrent protection shall be provided by protective devices within the overall installation to ensure UPS compatibility.

UPS static switch is sized to support the following overload periods; above these limits UPS is automatically turned Off:

- 110% permanently
- 125% for 60 minutes
- Up to 150% for 10 minutes

Thyristors used on bypass line have I^2t ($T_j=25^\circ\text{C}$) = 432.000 A²S for 160 and 200 kVA
As for further overload limit details refer to technical data table.

Redundant Auxiliary Power Supply for the Automatic Bypass

The UPS is equipped with a redundant auxiliary power supply to allow the automatic bypass to function even if the main power supply has failed.

If the UPS fails in addition to the main power supply, the load is powered through the automatic bypass. So doing, control circuits, display, and communication slots remain supplied whilst LCD display backlight and RS232 and USB ports are not active.

Authorised personnel might get access to UPS info and log event through communication slot serial link.


> 6.5 SMART VENTILATION

This UPS model is designed with the most advanced and consolidated technologies. To improve the level of reliability ensuring the utmost runtime under any environment situation, UPS is developed with smart ventilation concept. It includes:

- *Fan failure control:* the fans are controlled type. it means that any failure which can result in a fan rotation stop is reported to the logic. Subsequently, according with the load level and UPS internal temperature fan rotation speed and overall ventilation is adjusted; meantime user is promptly warned via display with a dedicated alarm.
- *Eco Ventilation:* with load below 60% and environment temperature 27°C UPS can operate with 50% of designated fans; others remain in stand-by waiting for load level increase or temperature rise. This result in a reduction of noise level and energy consumption, preserving the fan lifespan.
- *Redundant ventilation:* Fan's embedded control and UPS control software, ensure UPS proper operation even with a group of fans completely out of order, if load level does not exceed 80% and if temperature room is below 30°C

7 - CONTROL PANEL

The control panel consists of a graphical display, 6 visual warning LEDs and 4 function keys. LCD display is 5.1" wide with 16 rows and 40 characters maximum on each one. The resolution is 240x128 pixel in black / white colour.

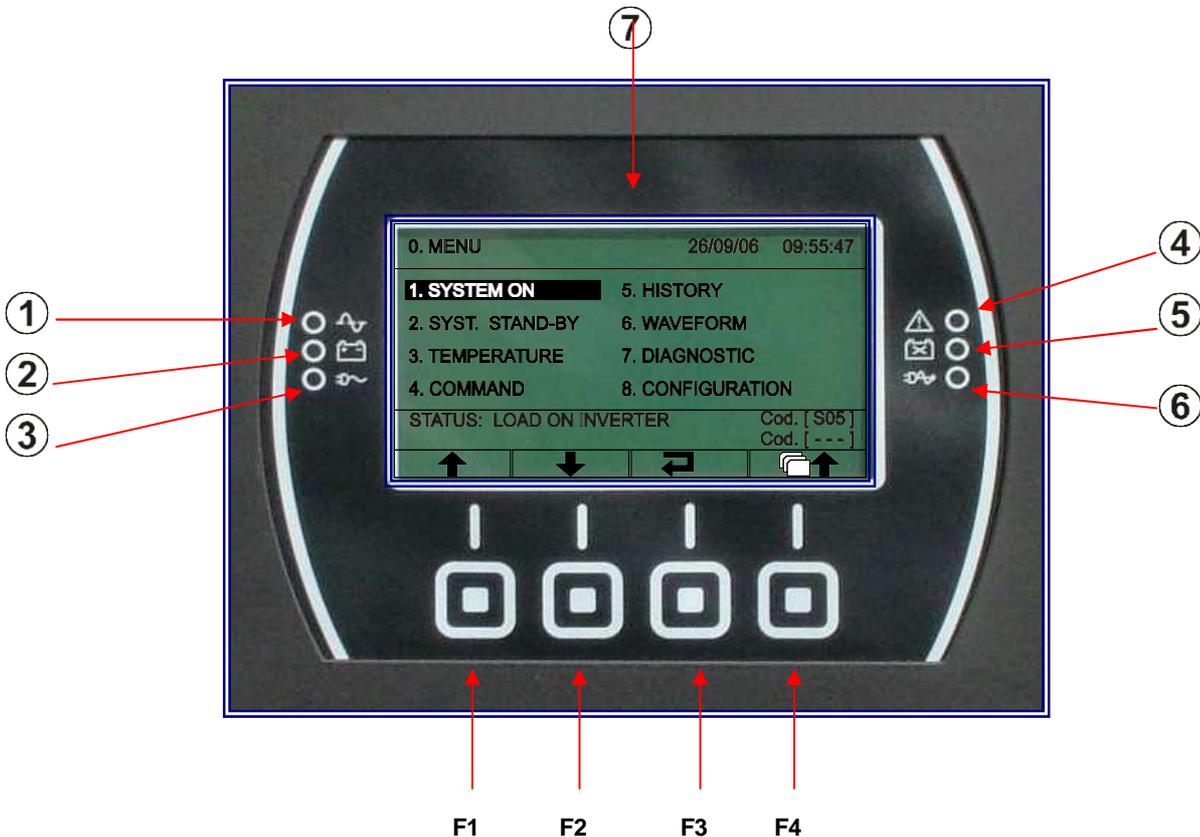


- ① LED for mains operation
- ② LED for battery operation
- ③ LED for load on bypass
- ④ LED for stand-by/alarm
- ⑤ LED for replace batteries
- ⑥ LED for ECO mode
- ⑦ Graphical Display

F1, F2, F3, F4= FUNCTION KEYS. The function of each key is illustrated in the lower part of the display and varies according to the menu.

Messages are available in the following languages: Italian, English, French, German, Spanish, Polish, Chinese and Russian.

At the centre of the control panel there is a wide-area graphical display providing a detailed real-time overview of the UPS operational state. From the control panel the user can switch the UPS on/off, read electrical measurements - mains, output, battery, etc, and set the main operational parameters.

The first page is a schematic view of UPS operating status:

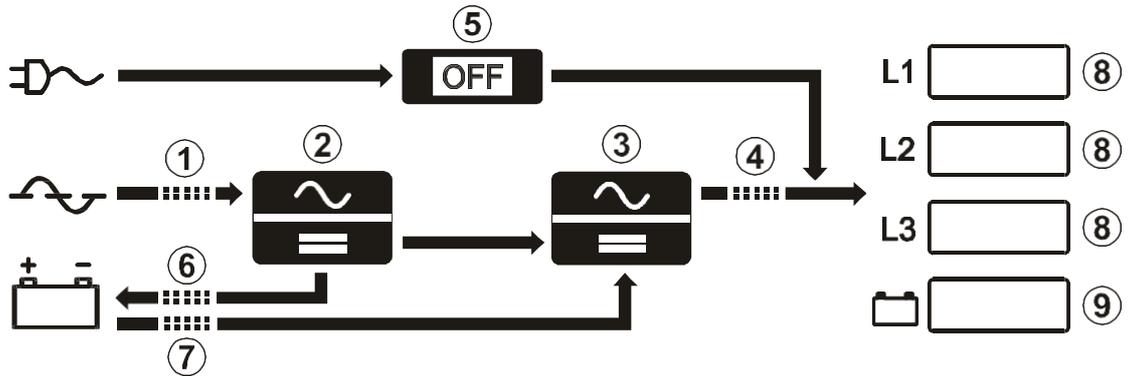

- ① Input Line
- ② PFC Converter
- ③ Inverter
- ④ Inverter Output Line
- ⑤ Automatic Static Bypass
- ⑥ Battery Charger Line
- ⑦ Battery Line
- ⑧ % Load
- ⑨ % Battery Charge

The diagram shows the status of the three power logical modules (PFC Converter, Inverter, Automatic Static Bypass).

Each module can take on one of the following status types:

- Module Off
- Module on in normal operating mode
- Module alarm or block

The following symbols show the power flow to and from the batteries (uncharged/charged) and the status of input and inverter contacts:

- Module Off
- Module on in normal operating mode

The display is divided into four main areas, each with a specific function:

1 GENERAL INFORMATION

An area permanently showing the date and time and according to the level of display, either the UPS model or the title of the menu active at that time.

2 DATA DISPLAY/NAVIGATION MENU

The main area of the display showing key UPS measurements (constantly updated in real-time). The user can also select and view various menus using the appropriate function keys. After selecting the required menu, this part of the display shows one or more pages containing all the data relevant to that menu.

3 UPS STATE / ERRORS – FAILURES

An area in which the UPS operating state is shown. The first line is always active and constantly displays the state of the UPS at any given time; the second line is active only if an error and/or failure of the UPS occurs and shows the type of error/failure found. Each line on the right shows the code corresponding to the current event.

4 EVENT LOG

An area showing chronological events recorded (supply voltage out of range, high temperature, overload, etc.) and alarms. The log records 960 events in FIFO (First In First Out) mode and the string contains the following information: Event Code, Event Description, Date and Time.

Data is displayed through the graphical display using the scroll keys; the log can be downloaded in TXT format using the "UComGP" configuration software.

5 KEY FUNCTIONS

An area divided into four sections, one for each of the function keys. According to the menu active at any time, the display will show the corresponding function key in the appropriate box.

When an alarm appears an audible warning will sound.

Measurements

- Input voltage and frequency
- By-pass voltage and frequency
- Output voltage, current and frequency
- Output power (VA, W and %)
- Output peak current
- Battery voltage
- Battery current (charge/discharge)
- Internal temperature (control logic, power modules, battery charger, internal batteries)
- External battery temperature
- Back-up time
- Output voltage/current and input voltage waveforms
- Output power generated by the UPS [kw/h]

8 - ISOLATING SWITCHES

The UPS is supplied with the following isolating switches located and accessible from behind the case front door:

- ① SWMB
Manual by pass
- ② SWOUT
output
- ③ SWIN
input
- ④ SWBYP
by pass (optional on certain versions)

9 - COMMUNICATION**Communication ports**

The front panel (behind the door) provides access to the following communication ports:

- Serial port, available with RS232 connector and USB connector.
NOTE: the use of one connector automatically excludes the other.
- Expansion slots (2x) for additional slot-in communications interface cards

Relay cards


A further expansion slot is available for a volt-free signal card (optional) 250Vac, 3A, 4 programmable contacts (Multicom 382).

This UPS model includes another specific relè card (Multicom 392) having 8 programmable relè alarms (25volt, 1 Amp) and 3 inputs (same available on AS 400 port).


Input/output configurations might be adjusted through the advanced configuration software available for authorised engineers (UComGP).

In order to carry out card installation and configuration refer to dedicated manual.

RS232 Connector

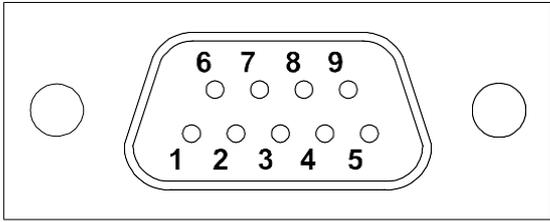

USB Connector

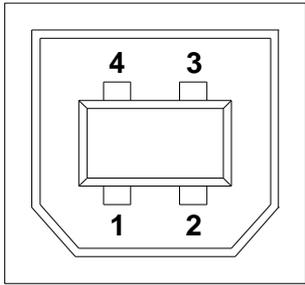

| PIN # | NAME | TYPE | SIGNAL |
|-------|-------|-------|--|
| 1 | | IN | |
| 2 | TX | OUT | TX serial line |
| 3 | RX | IN | RX serial line |
| 4 | | | |
| 5 | GND | POWER | |
| 6 | | OUT | |
| 7 | | | |
| 8 | +15V | POWER | Isolated power supply 15V±5% 80mA max |
| 9 | WKATX | OUT | ATX power supply wake-up |

| PIN # | SIGNAL |
|-------|--------|
| 1 | VBUS |
| 2 | D- |
| 3 | D+ |
| 4 | GND |


Communication Slots

The UPS has two panel expansion slots for slot-in interface accessories that can be used for a variety of communications options including:

- ▶ Second RS232 port
- ▶ Serial port duplicator
- ▶ Ethernet network agent with TCP/IP protocol, HTTP and SNMP
- ▶ RS232 + RS485 port with JBUS/22#MODBUS protocol

For further accessory information please visit our website.

AS400 PORT

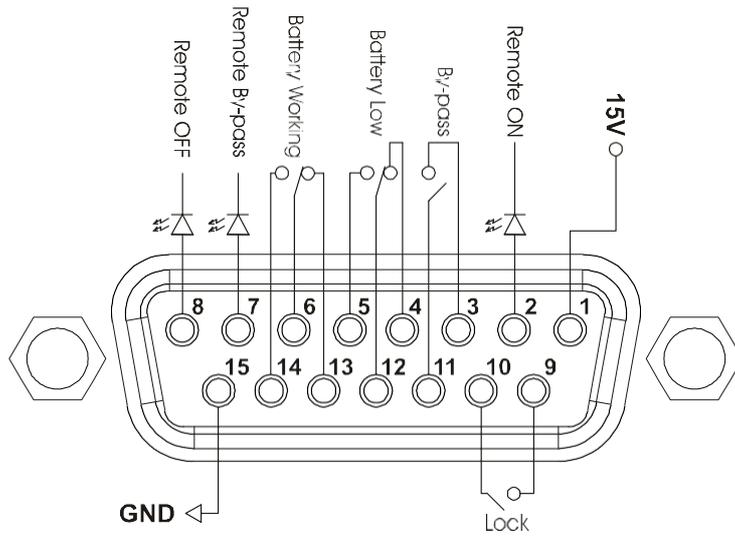

| PIN # | NOME | TIPO | FUNZIONE |
|---------|-----------------|-----------|---|
| 1 | 15V | POWER | Isolated auxiliary power supply +15V± 5% 80mA max |
| 15 | GND | POWER | Ground for the isolated auxiliary power supply (15V) and remote controls (Remote ON, Remote BYPASS, Remote OFF) |
| 2 | REMOTE ON | INPUT #1 | By connecting pin 2 with pin 15 for at least 3 seconds the UPS switches on |
| 8 | REMOTE OFF | INPUT #2 | By connecting pin 8 to pin 15 the UPS is shut down immediately |
| 7 | REMOTE BYPASS | INPUT #3 | By connecting pin 7 to pin 15 the load power supply switches from inverter to bypass. For as long as the connection is made, the UPS continues to operate on bypass even if the input mains supply fails. If the jumper is removed with the mains power supply present, the UPS will resume operation and the load will be powered by the inverter. If the jumper is removed with the mains power supply fails, the UPS will resume operation on battery power. |
| 4,5,12 | BATTERY LOW | OUTPUT #1 | Reports that the batteries are at the end of discharge when contact 5/12 is closed ⁽¹⁾ |
| 6,13,14 | BATTERY WORKING | OUTPUT #2 | Reports that the UPS is operating on battery power when contact 6/14 is closed |
| 9,10 | LOCK | OUTPUT #3 | When the contact is closed, reports that the UPS is blocked ⁽¹⁾ |
| 3,11 | BYPASS | OUTPUT #4 | When the contact is closed, reports that the bypass supply is powering the load |

NOTE: The diagram shows the contacts present inside the UPS that can provide a maximum current of 0.5A at 42Vdc. The position of the contacts in the diagram is shown without alarms or warnings.

⁽¹⁾ The output can be programmed through the appropriate configuration software. The function shown is the default (configured by the manufacturer).

> **9.1 EMERGENCY SHUTDOWN (R.E.P.O.)**

This isolated input is used to switch off the UPS in an emergency. The UPS is supplied with the "Remote Emergency Power Off" (R.E.P.O.) terminals short circuited. At installation, remove the short-circuit and connect to the normally closed contact of the shutdown device, using a double-insulating cable.

When activated from a remote push-button or other device in an emergency, the R.E.P.O connection opens and the UPS switches to stand-by mode. The UPS no longer powers the load.

The R.E.P.O circuit is supplied with SELV type circuits. No external supply voltage is required. When it is closed (normal condition), a maximum current of 15mA flows.

After an emergency shutdown, the UPS will return to on-line operating mode only when it receives a startup command from the mimic panel (provided that the Remote Emergency Power Off device is not still active).


> **9.2 EXTERNAL SYNCHRONISATION**

Different control signals are available on the rear side of the UPS to collect environment status info (switches ON/OFF) rather than temperature or synchronization signal; with particular reference to this one, it is a non-isolated input that can be used to synchronise inverter output with a suitable signal from an external source. It is essential when this UPS is used in combination with Static Switch Transfer Systems.

At installation, it is important to:

- use an isolation transformer with isolated single-phase output (SELV), 12-24ac and power = 0,5VA
- connect the transformer secondary to the "EXTERNAL SYNC" terminal through a double-insulation cable with cross-sectional area of 1 sq.mm-

The external synchronization must be enabled through the advanced configuration software (UComGP) assigned to authorized personnel.

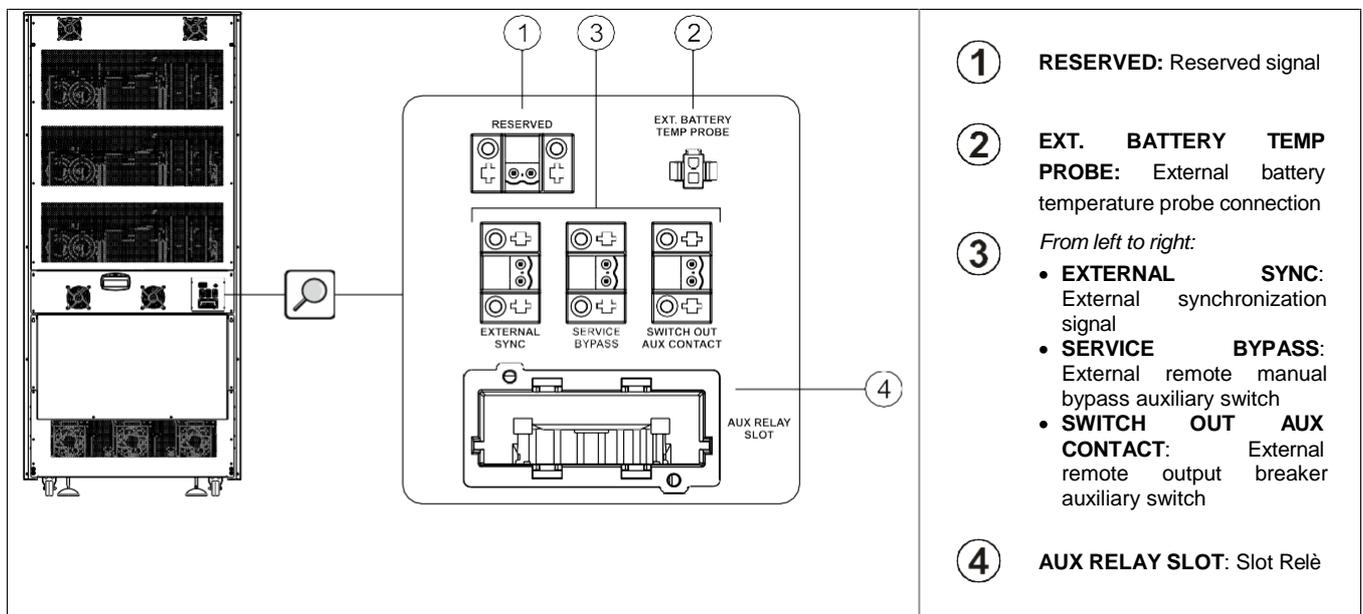

> 9.3 MONITORING AND CONTROL SOFTWARE

The UPS is supplied with Powershield® UPS monitoring and control software to provide the following:

- Chronological event recording
- UPS operating status management
- E-mail, modem, SNMP agent support
- Sequential shutdown and load-shedding within a network environment

> 9.4 CONFIGURATION SOFTWARE

User can modify some of the UPS configurations from the operating mimic panel; here below the list of adjustable functions:

| FUNCTION | DESCRIPTION | DEFAULT | POSSIBLE CONFIGURATIONS |
|-------------------------|---|---------|---|
| Language* | Selects mimic panel language | English | <ul style="list-style-type: none"> • English • Italian • German • French • Spanish • Polish • Russian • Chinese |
| Output voltage | Selects the rated output voltage (Phase - Neutral) | 230V | <ul style="list-style-type: none"> • 220V • 230V • 240V |
| Buzzer | Selects the audible alarm operating mode | Reduced | <ul style="list-style-type: none"> • Normal • Reduced: does not sound due to the momentary intervention of the bypass |
| Operating mode** | Selects one of five different operating modes | ON LINE | <ul style="list-style-type: none"> • ON LINE • ECO • SMART ACTIVE • STAND-BY OFF |
| Battery low ** | Estimated autonomy time remaining for "battery low" warning | 3 min. | 1 ÷ 7 @1 min step |
| Date and time** | UPS internal watch setup | | |

* Pressing the F1 and F4 keys at the same time for $t > 2$ sec will automatically reset English as default language.

** This function might be locked by configuration software.

Authorized service centers can modify all UPS configurations through configuration software ("configurator" of UCom GP program) as below defined:

| FUNCTION | DESCRIPTION | DEFAULT | POSSIBLE CONFIGURATIONS |
|---------------------------------|--|------------------|--|
| BASIC | | | |
| Operating mode | Selects one of five different operating modes | ON LINE | <ul style="list-style-type: none"> • ON LINE • ECO • SMART ACTIVE • STAND-BY OFF • Frequency converter |
| Output voltage | Selects the rated output voltage (Phase - Neutral) | 230V | <ul style="list-style-type: none"> • 220 ÷ 240 1 V step • 200V with power downgrading • 208V with power downgrading |
| Output nominal frequency | Selects the rated output frequency | 50Hz | <ul style="list-style-type: none"> • 50Hz • 60Hz |
| Autorestart | Waiting time for automatic power-on after the return of mains voltage | 5 sec. | <ul style="list-style-type: none"> • Disabled • Delay: 1 - 255 @1 sec step |
| Auto power off | Automatic UPS power-off in battery operation mode if the charge is lower than 5% | Disabled | <ul style="list-style-type: none"> • Enabled • Disabled |
| Buzzer Reduced | Selects the audible alarm operating mode | Reduced | <ul style="list-style-type: none"> • Normal • Reduced: does not sound due to the momentary intervention of the bypass |
| EnergyShare off | Selects the auxiliary socket operating mode | Always connected | <ul style="list-style-type: none"> • Always connected • Disconnection after n seconds of battery operation • Disconnection after n seconds from the battery low pre-alarm signal • ... (see software configuration manual) |
| Timer | Programmed UPS switching ON-OFF (daily) | Disabled | <ul style="list-style-type: none"> • Timer ON (hh:mm) • Timer OFF (hh:mm) |

| FUNCTION | DESCRIPTION | DEFAULT | POSSIBLE CONFIGURATIONS |
|--|---|------------------|--|
| ADVANCED | | | |
| Autonomy limitation | Maximum battery operation time | Disabled | <ul style="list-style-type: none"> Disabled (complete battery discharge) 1 - 65534 @1 sec step |
| Maximum load | Selects the user overload limit | Disabled | <ul style="list-style-type: none"> Disabled 0 - 103 @1 % step |
| Power walk-in start delay | Adjustable delay for the power walk-in start up | 3 sec | <ul style="list-style-type: none"> Disable (0 sec set up) Enable 1 ÷120 @1 sec step |
| Power walk-in duration | Gradual Input current ramp absorption following mains return | Disable | <ul style="list-style-type: none"> Disable (0 sec set up) Enable 1 ÷ 125 @1 sec step |
| Auto system on | Automatic UPS power-on | Disable | <ul style="list-style-type: none"> Disable Enable |
| UPS Input Current | UPS input current shown on display | Disable | <ul style="list-style-type: none"> Disable Enable |
| Bypass Synchronization speed | Selects the synchronisation speed of the inverter to the bypass line | 1 Hz/sec | <ul style="list-style-type: none"> 0.5 Hz/sec 1 Hz/sec 1.5 Hz/sec 2 Hz/sec |
| Panel lock - Enable config change | Disables UPS settings from the Display Panel | Settings enabled | <ul style="list-style-type: none"> Settings enabled Settings disabled |
| Display Code | Disable the access to display complete menu (remain accessible measures, states, alarms, menu, only) | Disable | <ul style="list-style-type: none"> Enable and setup the code sequence (4 selecting characters, 6 digits: 4096 possible keys) |
| Panel lock - Enable command | Disables command from the Display Panel | Commands enabled | <ul style="list-style-type: none"> Commands enabled Commands disabled |
| External synchronization | Selects the source of synchronisation for the inverter output | From bypass line | <ul style="list-style-type: none"> From bypass line From external input From bypass line if within the limits; from external input otherwise |
| External temperature | Activates reading of the external temperature probe | Disable | <ul style="list-style-type: none"> Disable Enable (for floating voltage, only and not recharging) Not modifiable compensation: 3,3mV °C / Cell on the field 25-50°C |
| Communication speed Slot 1 | Communication speed for serial port (Slot 1) | 1200bps | <ul style="list-style-type: none"> 1200bps (PRTK GPSER11201..) 9600bps (PRTK GPSER19601..) |
| Communication speed Slot 2 | Communication speed for serial port (Slot 2) | 1200bps | <ul style="list-style-type: none"> 1200bps (PRTK GPSER11201..) 9600bps (PRTK GPSER19601..) |

| FUNCTION | DESCRIPTION | DEFAULT | POSSIBLE CONFIGURATIONS |
|---|--|-----------------------------|--|
| BYPASS | | | |
| Separated bypass line | UPS bypass line separated from rectifier line | Separated bypass line | <ul style="list-style-type: none"> • Common bypass line • Separated bypass line |
| Auto bypass on | UPS start up and load feeding as soon as by-pass line is restored | Disable | <ul style="list-style-type: none"> • Disable • Enable |
| Bypass mode | Selects the mode of use of the bypass line | Enabled / High sensitivity | <ul style="list-style-type: none"> • Enabled / High sensitivity • Enabled / Low sensitivity • Disabled with input/output synchronisation • Disabled without input/output synchronisation |
| Bypass active in stand-by | Load supply from bypass with UPS in stand-by | Disable (load NOT supplied) | <ul style="list-style-type: none"> • Disable (load not supplied) • Enable (load supplied) |
| Bypass frequency tolerance | Selects the accepted range for the input frequency for switching to the bypass and for the synchronisation of the output | ± 5% | <ul style="list-style-type: none"> • ± 0.25% • ± 0.5% • ± 0.75% • ± 1 - ±10 @n 1% step |
| Bypass min.-max. threshold | Selects the accepted voltage range for switching to the bypass | Low: 180V High: 264V | <ul style="list-style-type: none"> • Low: 180 ÷ 220 @ 1V step • High: 240 ÷ 264 @ 1V step |
| Bypass intervention sensibility | Inverter output waveform sensibility control | 0,5 ms | <ul style="list-style-type: none"> • 0,5 ÷ 10 ms @ 0,1 ms |
| Bypass Switching delay without synchronization | Delay transfer to bypass with no synchro mains-inverter | 10 ms | <ul style="list-style-type: none"> • 0 (Transfer disable) • 10 ÷ 100 ms @ 10 ms step |
| Eco mode sensibility | Selects the intervention sensivity during operation in ECO mode | Normal | <ul style="list-style-type: none"> • Low • Normal • High |
| Eco mode min.-max. threshold | Selects the accepted voltage range for operation in ECO mode | Low: 200V High: 253V | <ul style="list-style-type: none"> • Low: 180 ÷ 220 @ 1V step • High: 240 ÷ 264 @ 1V step |

| FUNCTION | DESCRIPTION | DEFAULT | POSSIBLE CONFIGURATIONS |
|--------------------------------------|--|--|--|
| BATTERY | | | |
| UPS without battery | Operating mode without batteries (for converters or voltage stabilizers) | Operating with Batteries | <ul style="list-style-type: none"> With Batteries Without Batteries |
| Battery low time | Estimated autonomy time remaining for "battery low" warning | 3 min. | <ul style="list-style-type: none"> 1 - 255 @ 1 min step |
| Autorestart voltage | Minimum Battery voltage for automatic restart | 236V | <ul style="list-style-type: none"> 200 ÷ 260 @ 1V step |
| Automatic battery test | Interval of time for the automatic battery test | 40 ore | <ul style="list-style-type: none"> Disabled 1 ÷ 273 hours @ 1 hour step 1 ÷ 39 day at defined hour Defined day and hour within the month |
| Parallel common battery | Common Battery for parallel UPS systems | Disable | <ul style="list-style-type: none"> Disable Enable |
| Internal battery capacity | Nominal Battery capacity for internal batteries | Change according with UPS model | <ul style="list-style-type: none"> 0 – 18 Ah @ 1 Ah step |
| External battery capacity | Nominal Battery capacity for external batteries | 7Ah for UPS without internal batteries; 0Ah all other cases | <ul style="list-style-type: none"> 0 ÷ 999 @ 1Ah step |
| Battery charging algorithm | Algorithm and Battery recharging threshold (#) | Two levels | <ul style="list-style-type: none"> Floating Two levels Cycling recharge Customised |
| Battery recharging current | Recharging current compare to battery nominal capacity (%) | 12% | <ul style="list-style-type: none"> 3 ÷ 50 @ 1% step |
| Internal charger | Nominal recharging current for internal battery charger | Change according with UPS model | <ul style="list-style-type: none"> 6 Amps 10 Amps 20 Amps 25 Amps |
| Additional charger (external) | Nominal recharging current for external battery charger (not inside UPS) | 0A | <ul style="list-style-type: none"> 0 ÷ 100 @ 1Amp step |

| FUNCTION | DESCRIPTION | DEFAULT | POSSIBLE CONFIGURATIONS |
|--|--|----------------------|--|
| EXTERNAL I-O | | | |
| I/O card model | Select the relay expansion card type | Multicom 382 [4 out] | <ul style="list-style-type: none"> Multicom 382 [4 out] Multicom 392 [8 out] |
| Input contact #3 mode | Input contact port setting (AS400 port or MultiCOM 382) | | see software configuration manual |
| Output contact #1-#2-#3-#4 mode | Output contact port setting (AS400 port or MultiCOM 382) | | see software configuration manual |
| Output contact #1 ÷ #8 Mode/Logic/Delay | Output contact port setting (MultiCOM 392) | | see software configuration manual |

(#) Batteries voltage configuration

| | | | |
|----------------------------------|-----------------------|--------|---|
| Battery custom thresholds | Recharging voltage | ±286 V | <ul style="list-style-type: none"> ±260 ÷ ±300 V |
| | Floating voltage | ±273 V | <ul style="list-style-type: none"> ±260 ÷ ±300 V |
| | Battery low voltage | ±220 V | <ul style="list-style-type: none"> ±210 ÷ ±240 V |
| | End discharge voltage | ±204 V | <ul style="list-style-type: none"> ±190 ÷ ±230 V |
| | Recharging current | 12 % | <ul style="list-style-type: none"> 3 ÷ 50 % |

10 - UPS CABINET

The cabinet is made of galvanised steel with an IP20 rating (degree of Ingress Protection), even with the front door open.

Ventilation via the rear panel; air intake is front to rear.

The main assemblies (including the power module are temperature monitored).

11 - OPTIONS

> 11.1 COMMUNICATION

PowerNETGuard is a centralised UPS management and control software package using the SNMP communications protocol. It is the ideal UPS management tool for IT/EDP managers running datacenters and medium-to-large-sized networks.

The main features of the software include:

- Various display levels by geographical areas, building plans, maps.
- Multi-user accesses with various security levels.
- Compatible with RFC 1628 standard SNMP agents.
- Graphical representation and file backup of operating measurements
- Notification of alarms via email and SMS.
- Integrated Wap Server for display of alarms.
- Suitable for operation with Windows operating systems: (98, ME, NT, 2000, 2003, and Xp) Linux, Mac OS X, Solaris 8 and 9.

Hardware

Two slots are available in which to house one or two of the following options:

- **NetMan 102 Plus:** the NetMan Plus network agent allows UPS management across a LAN using any of the main network communication protocols - TCP/IP, HTTP and network interface (SNMP). NetMan Plus enabled UPS integrate easily into medium and large sized networks and provide reliable communications between the UPS and management systems employed.

MultiCom 302: a Modbus/Jbus protocol converter through an RS232 or RS485 output for monitoring the UPS, for example, from a BMS (Building Management System). It also provides a second independent RS232 serial line that can be used by other devices such as a NetMan Plus or PC.

MultiCom 352: it is a serial duplexer that allows two devices to be connected to a single serial port on a UPS. It can be used where numerous serial connections and multiple UPS polling are required, and is ideal for LAN networks with a firewall..

Multicom 382: it provides a set of relay contacts to provide UPS alarm and status indication. The contacts are connected through terminal connections. Signal contacts include Emergency Power Off (EPO), Remote Shut Down (RSD), On Battery, On Bypass, Alarm and Low battery. The contacts are change over or normally open.

Multicom 401: it is an external accessory with which you can connect a UPS to a Profibus DP network. With this device management and monitoring of the UPS can be integrated in a control system based on one of the field buses most widely used in industry for communication between control/automation systems and distributed I/O .

Multi I/O Card: Multi I/O has configurable input and output signal contacts to allow UPS integration with control systems. It can be used to connect two devices to a single UPS serial communication port. It can also communicate using the MODBUS/JBUS protocol on RS485 lines.

Multicom 362: MultiCOM 362 provides a UPS with an additional RS232 serial interface or USB port. The USB port allows the UPS to communicate with Apple Macintosh computers as well as Windows and Linux operating systems.

Multicom 372: MultiCOM 372 provides a UPS with an additional RS232 serial interface port. The card has Emergency Power Off (EPO) and Remote Shut Down (RSD) inputs with terminal connections.

Usb Converter: the converter allows UPS without a USB port to connect to Macintosh, Windows and Linux PCs with this type of port.

Kit for AS400 and i-Series: the IBM AS/400 has a single-level memory management feature that makes it compulsory for the system to be shutdown in a controlled and orderly manner. Without UPS protection an AS/400 is not protected from mains failures. A momentary loss of power can cause hardware damage, data corruption and a lengthy reboot period. The AS/400 interface kit allows a UPS to be connected to the AS/400 to initiate an orderly system shutdown on mains failure.

Multi Panel: MultiPanel is a remote monitoring device that can provide a detailed UPS status overview in real time. It is compatible with all Saturn UPS range and can display values for UPS specific input and output supplies, and battery set measurements. MultiPanel has a high-definition graphical display and can report in 7 languages: English, Italian, German, French, Spanish, Russian and Chinese. It has 3 independent serial ports, one of which allows for UPS monitoring via the MODBUS/JBUS protocol (on either an RS485 or RS232 serial line). The others can be used with devices such as the Netman 101 Plus or a PC running PowerShield³ software.

> **11.2 EXTERNAL BATTERY TEMPERATURE SENSOR**

The UPS has a special entry point for measuring the temperature inside a remote Battery Box and indicating the temperature on the UPS display.

The specific kit supplied by the manufacturer includes a bipolar double isolated cable measuring 6 meters. The use of a bipolar cable without isolation exposes the UPS and the user to risks resulting from a lack of isolation as the reading refers directly to the UPS neutral earthing.

Once installed, the device is configured using the "UComGP" software package assigned to authorized personnel.

> **11.3 EXTERNAL MAINTENANCE BYPASS**

An external remote maintenance bypass can be installed with the UPS, to allow, for example, UPS replacement without disruption to the load.

If this option is chosen, it is essential to connect the "SERVICE BYPASS" terminal located inside the UPS to the auxiliary "Normally Open "(NO) contact of the SERVICE BYPASS switch. Operation of the SERVICE BYPASS switch closes this auxiliary contact and informs the UPS. If such a connection is not made, operation of the remote maintenance bypass may disrupt the supply of power to the load and damage the UPS.

Note: Always check that the remote maintenance bypass installation (if selected) is compatible with any transformer options selected for the UPS - see paragraph 11.6 Optional Transformer.


> **11.4 BATTERY CABINETS**

The battery cabinet should be used to provide suitable power back up when an UPS mains failure occur.

The number of batteries housed within the cabinet varies according to UPS rating. It is therefore necessary to carefully match that Battery Cabinet DC rating to that of the UPS.


UPS can monitor the status of battery switch located on the cabinet via auxiliary switch contact connected to Multicom 392 and proper card configuration via UComGP program. (Reserved to authorised personnel).

The Battery Cabinet configuration is shown below.

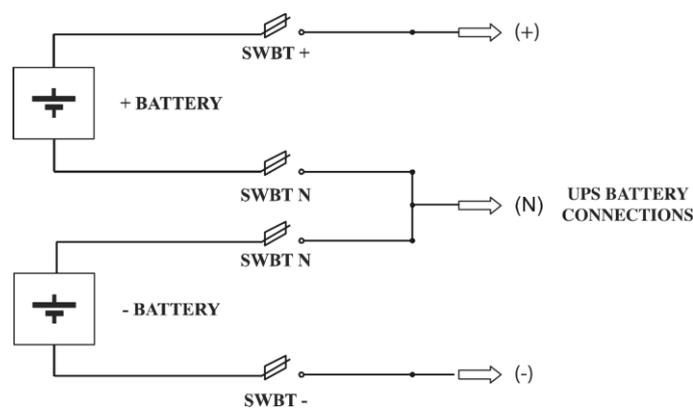

Other solutions may be developed on site, bearing in mind that:

- the structure of the battery enclosure must respect that described above.
- the number of batteries must remain constant (20+20 12 volt monoblocks)
- the battery capacity (expressed in AH) must fall within the range of 4 and 20 times the available recharging current (see the **“technical specifications table”**)
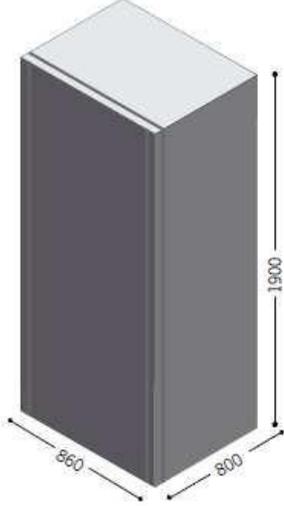
| BATTERY BOX MODELS | AB 1900 480-V9 |
|---|---|
| <p>DIMENSIONS (mm)</p> <p>H x L x P</p> |  |
| | <p>1400kg (200 empty)</p> |

According with UPS power, minimum battery configuration is 1x100Ah associate either to 160 or 200 kVA.

> 11.5 ADDITIONAL BATTERY CHARGER

The UPS can be furnished from the factory with an additional battery charger placed in parallel with the standard one (160÷200kVA).

It's possible to install the additional charger on site also through a special installation kit (for 160÷200kVA)

| Model | 160-200 KVA |
|-----------------------------------|-------------------------------|
| Standard battery charger | 25 Amperes |
| Additional battery charger | 25 Amperes (50 Amperes total) |

> 11.6 OPTIONAL TRANSFORMERS


An external transformer can be installed. Transformer options include: supply neutral reference, Galvanic isolation and output voltage (step-up or down).

Electric connections diagrams


The following drawings just provide a general overview of the possible installation scenarios. Every configuration should be carefully evaluated according with the real installation environment.

Note: An external transformer will modify the neutral arrangements of the installation. Therefore, if a "remote maintenance bypass" is installed it must be sited downstream of the transformer (for an input-side transformer) or upstream (for an output-side transformer).


UPS without variation of the neutral arrangements

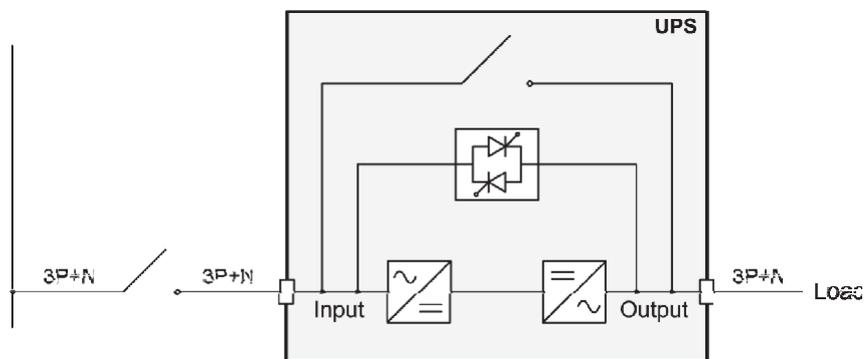


UPS with Galvanic isolation on the input

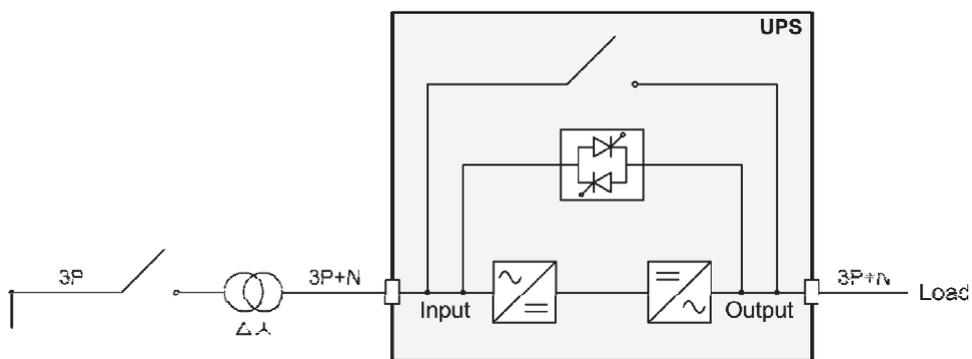

UPS with Galvanic isolation on the output

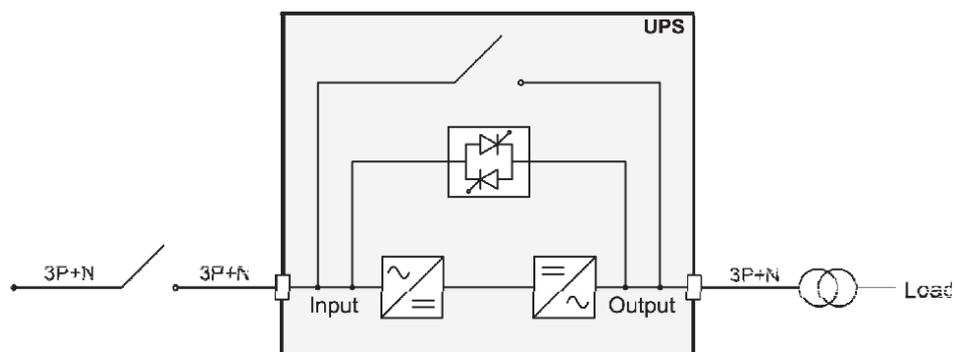


UPS without variation of the neutral arrangements and with a separate bypass supply input

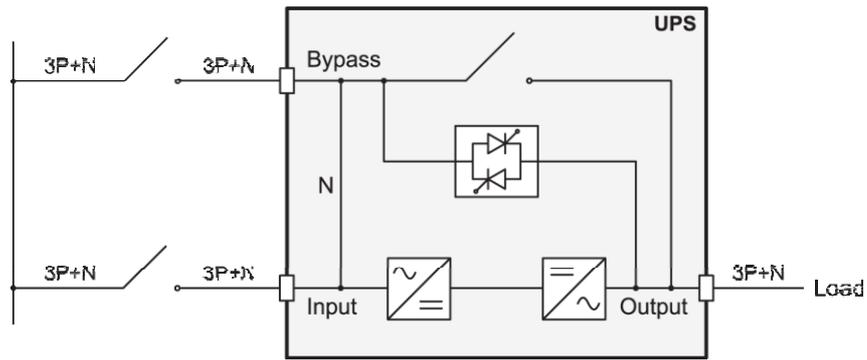


Remove the jumpers present between the SWIN and SWBY isolating switches, if present

UPS with Galvanic isolation on the input-side and separate bypass supply input

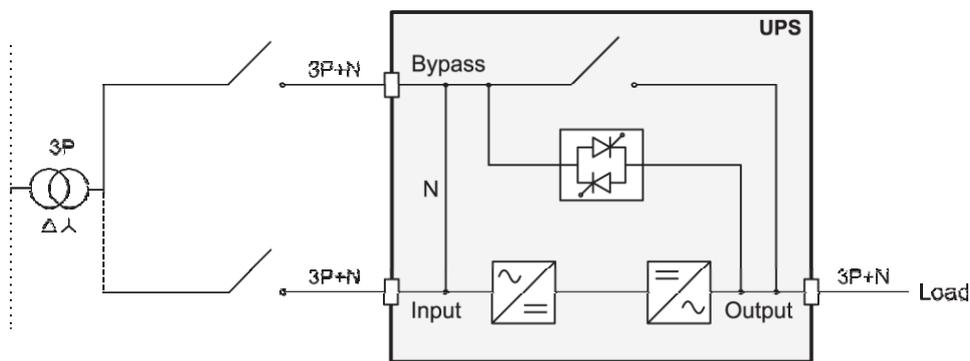

Remove the jumpers present between the SWIN and SWBY isolating switches, if present

UPS with Galvanic isolation on the output-side and separate bypass supply input

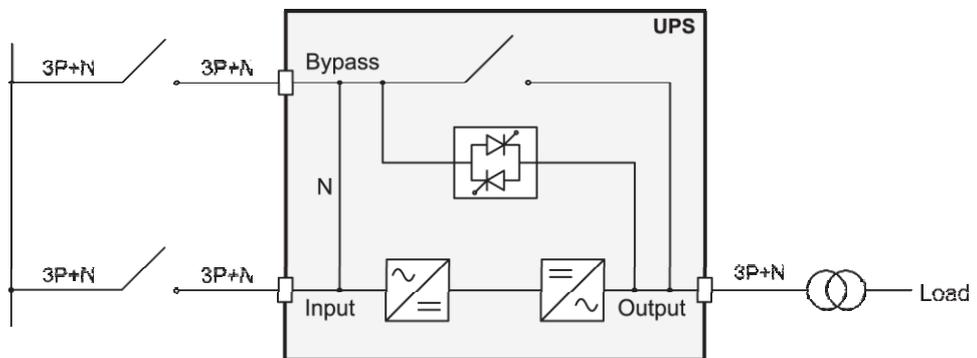


Remove the jumpers present between the SWIN and SWBY isolating switches, if present

Separate bypass on separated lines upstream:

Neutral of the input line and that of the bypass are joined inside the equipment, therefore they will refer to the same potential. If the two mains supplies are different, it is necessary to use an isolation transformer on one of the inputs.


Note: In all these three cases below, the neutrals feeding both rectifier and bypass inputs are different. Assuming the UPS joins them together, ensure that earth connections is carried out either on bypass line neutral or rectifier line neutral, not on both!

UPS with a separate bypass supply and galvanic insulation on bypass line

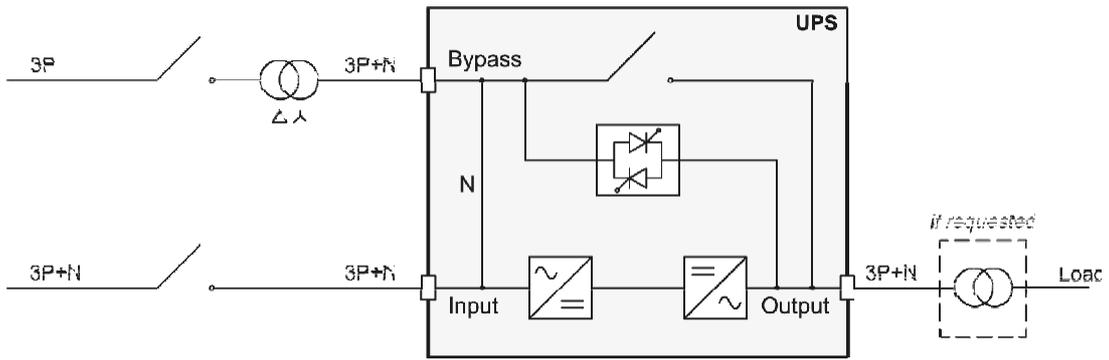


Remove the jumpers present between the SWIN and SWBY isolating switches, if present

UPS with a separate bypass supply and galvanic insulation on rectifier line

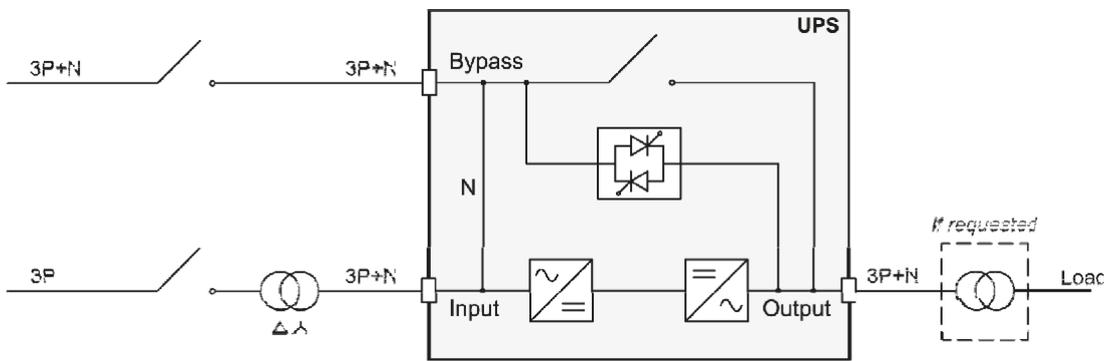

Remove the jumpers present between the SWIN and SWBY isolating switches, if present

UPS with a separate bypass supply connected to an independent mains supply and with galvanic insulation on both input lines

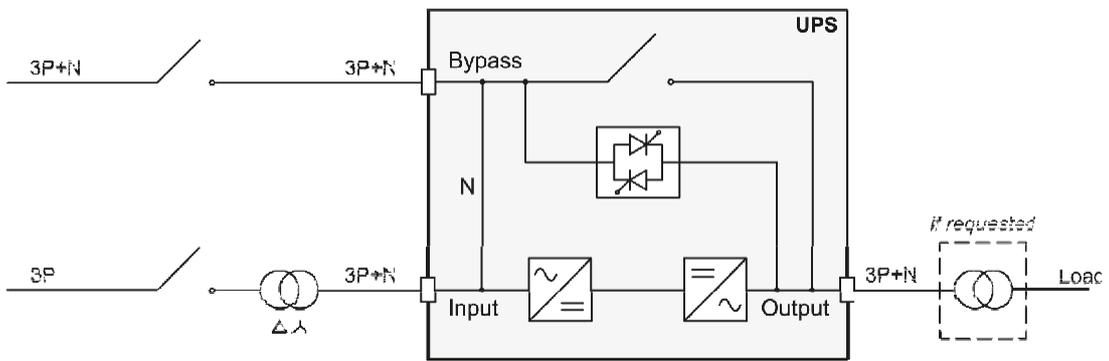

Remove the jumpers present between the SWIN and SWBY isolating switches, if present

> **11.7 SEPARATE LINE INPUT**


This UPS versions in the range 160÷200 KVA are provided with a single feeding input. Simply removing the parallel input jumpers it is possible to separate the bypass line from the rectifier input line directly on site.

Anyway, this operation guarantee the dissection of both the feeding lines through the two switches present on the UPS (SWIN-SWBYP).

> **11.8 AUXILIARY SOCKETS**

The UPS 160÷200 KVA are equipped as standard with auxiliary sockets named Aux Output (1x Shucko directly connected to the output)

It caters auxiliary power supply (230V / max 10A)

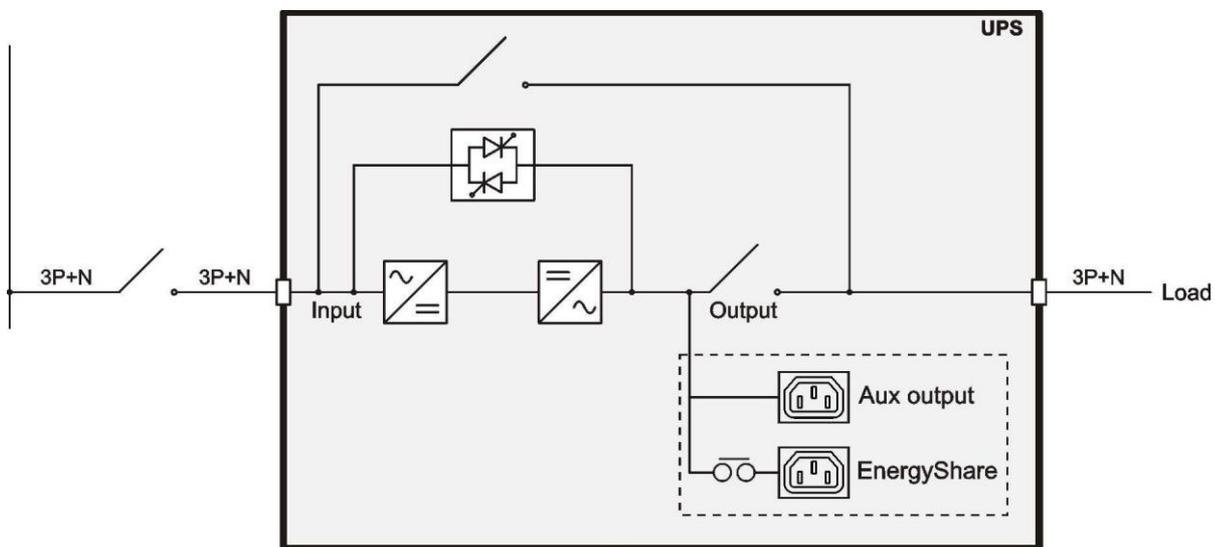

No Energy share socket is contemplated as option for model 160÷200 kVA.

NOTE: if the output switch (SWOUT) is opened while the UPS is on, both sockets remain powered.

If a manual bypass switch (SWMB) is inserted, the output switch (SWOUT) is opened and the UPS switches off and both sockets will no longer be powered.

> 11.9 TOP CABLE ENTRY

It is an optional accessory compatible with Saturn 160÷200kVA.

This accessory facilitate the cable fixing whenever is required a cable top entry installation; it can be placed on right side of the UPS and it comes with interconnection cables (further option) between UPS input/output standard connection bars and the side cabinet fixing terminals. Customer shall accommodate and fix the incoming cables from the roof according with the domestic standards and/or best practices.

For further details, please refer to Top cable entry installation drawings.

> 11.10 EYEBOLTS KIT

It is an optional accessory compatible with Saturn 160÷200kVA.

This accessory can be requested to facilitate the UPS moving and placement during the installation.

Please refer to the kit installation manuals for further details and warnings.

12 – ENVIRONMENTAL CONDITIONS

| | |
|---|---|
| Room ambient temperature | 0 to 40° C |
| Maximum operative temperature (continuous) | 40° C |
| Recommended working temperature for optimum battery performance | 20 to 25° C |
| Storage temperature | - 25° up to +60 °C (UPS) - 15° up to +40 °C (UPS with battery) |

13 – TECHNICAL DATA 160–200 KVA

| Mechanical Characteristics | UPS Power (kVA) | |
|-----------------------------------|---|------------|
| | 160 | 200 |
| Dimensions [mm] | | |
| • Width | 840 | |
| • Depth | 1050 | |
| • Height | 1900 | |
| Weight [Kg] | 450 | 460 |
| Ventilation | Forced through internal fans (failure controlled) | |
| Cabinet IP rating | IP20 | |
| Cable input | From the bottom/On the rear | |
| Colour | RAL 7016 | |

| Electrical data | UPS Power (kVA) | |
|---|--|------------|
| | 160 | 200 |
| INPUT | | |
| Nominal voltage | 380-400-415 Vac Three-Phase plus neutral | |
| Maximum Input Current ⁽¹⁾ | 316 | 385 |
| Voltage range (without switching to battery power) | 320 to 480 V at 100% of the load 240 to 480 V at 50% of the load | |
| Nominal frequency | 50 or 60Hz | |
| Input frequency tolerance | 40 to 72Hz | |
| Total Harmonic distortion (THDi) and power factor with full load | THDi 2,5 % , 0,99 Pf | |
| Rectifier progressive start-up (Power Walk-in duration) | Programmable from 1 to 125 seconds in steps of 1 second (standard disable) | |
| Adjustable delay for the rectifier start up (Power Walk-in start delay) | Programmable from 1 to 120 seconds in steps of 1second. (3 seconds by default) | |

⁽¹⁾ The maximum input current is stated for the following general conditions:

- Nominal linear load (pf =1)
- Input voltage at 346 Volts
- Battery charging current of 25 Ampere

| Electrical data | UPS Power (kVA) | |
|--|------------------------|------------|
| | 160 | 200 |
| DC BUSBAR AND BATTERY SET | | |
| Number of battery cells | 120+120 | |
| Float voltage (2,27 V/el. adjustable) [V] | 273+273 Vdc | |
| Boost voltage (2,4 V/el. adjustable) [V] | 288+288 Vdc | |
| End of discharge voltage – load dependent (1,6 V/el. adjustable) [V] | 192+192 Vdc | |
| Battery Maximum Current[Amp] | 456 | 567 |
| Standard battery charger ⁽²⁾ | Nominal 25 Amps | |
| 0-100 % | 25A | |
| Additional battery charger ⁽²⁾ | Additional 25 A | |
| Full load | 25 A | |
| 95% load | 50 A | |

⁽²⁾ The currents refer to input voltages ≥ 200 Volt

| Electrical data | UPS Power (kVA) | |
|--|---|------------|
| | 160 | 200 |
| INVERTER | | |
| Nominal power [kVA] | 160 | 200 |
| Active power pF 1 [kW] | 160 | 200 |
| Nominal power with load power factor from 0,9 inductive to 0,9 capacitive [kVA] - without power downgrading | 160 | 200 |
| Nominal voltage | 380/400/415 Vac Three-Phase plus neutral | |
| Derating for output voltage (Phase – Neutral) set to: | | |
| 220 V | - 4 % | |
| 208 V | - 10 % | |
| 200 V | - 13 % | |
| Nominal frequency | 50 / 60Hz | |
| Static stability | ± 0,5% | |
| Dynamic stability | ± 3% ⁽³⁾ (resistive load) EN62040-3 class performance 1 distorting load | |
| Recovery Time within ± 1% | 20ms In compliance with standard EN 62040-3, class 1 | |
| Crest factor (I _{peak} /I _{rms} as per EN 62040-3) | 3:1 | |
| Voltage distortion with linear and distorting load (EN 62040-3) | ≤ 0,5% with linear load ≤ 3% with distorting load | |
| Inverter frequency stability without by-pass supply synchronisation | 0,01% | |
| R _t ae of Frequency variation | 1Hz/sec (adjustable from 0,5 to 2) | |
| Voltage phase Dissymmetry with balanced and unbalanced loads | ± 1% / ± 2% | |
| Voltage phase shift with balanced and unbalanced loads | 120 ± 1 ° | |
| Inverter Overload | >100% ÷ ≤103% infinite >103% ÷ ≤110% 60 min. >110% ÷ ≤125% 10 min. >125% ÷ ≤150% 1 min. >150% ÷ ≤200% 0,5 sec. >200% 0,2 sec | |
| Short circuit current | 2,7 I _n for 200 ms + 1,5 x I _n for 300 ms | |
| Efficiency on battery-operation | >95,5 % | |

⁽³⁾ @ Mains / battery / mains @ resistive load 0% / 100% / 0%

| <i>Electrical data</i> | <i>UPS Power (kVA)</i> | |
|---|---|------------|
| | <i>160</i> | <i>200</i> |
| <i>BY-PASS</i> | | |
| Nominal voltage | 380-400-415 Vac Three-Phase plus neutral | |
| Output nominal current [A] | 232 | 290 |
| Bypass voltage range | from 180V (adjustable 180-200) to 264 V (adjustable 250-264V) | |
| Nominal frequency | 50 to 60Hz | |
| Bypass input frequency range | ± 5% (adjustable from 0,25 to 10%) | |
| Transfer time from By-pass to Inverter (UPS in "ECO mode") [ms] | 2 - typical | |
| Transfer delay to Inverter from By-pass [sec] | 4 | |
| Max current in short circuit for: | | |
| 20 ms (Tj 25°C) [A] | 9300 | |
| 100 ms (Tj 25°C) [A] | 6500 | |
| Overload capability on bypass line | ≤ 110% infinito > 110% ÷ ≤125% 60 min. > 125 ÷ ≤150% 10 min. > 150% 1 min. | |

| <i>Electrical data</i> | <i>UPS Power (kVA)</i> | |
|---|---|--|
| | <i>160</i> | <i>200</i> |
| SYSTEM | | |
| AC/AC Efficiency (On line) – [%] | | |
| Full load | 95,9% | 95,6% |
| 75% Load | 96,1% | 96,0% |
| 50% Load | 96,0% | 96,1% |
| 25% Load | 95,1% | 95,5% |
| Auto-consumption: | | |
| UPS on line mode without load [kW] | 1,5 | |
| UPS stand by without load [kW] | 0,4 | |
| Efficiency with UPS in eco mode @full load | >99% | |
| Audible noise at 1mt (according to EN62040-3) –[dBA+/-2 dBA] ⁽⁴⁾ | ≤ 68 @ On line mode ≤ 50 @ Eco mode | ≤ 70 @ On line mode ≤ 50 @ Eco mode |
| Operating temperature | 0 ± 40 °C | |
| Max. relative humidity during operation | 90% (without condensation) | |
| Max. installation altitude | 1000 m at nominal power (- 1% reduction in power for every 100m over 1000m) Max 4000m | |
| Power dissipated with resistive nominal load (pf=1) and with battery charged * | 6,9kW | 9,3 kW |
| | 5933 kcal/h | 7997 kcal/h |
| | 23544 B.T.U./h | 31733 B.T.U./h |
| Power dissipated with resistive nominal load (pf=1) and with battery under recharge (25 Amp)* | 7,5 kW | 9,9 kW |
| | 6449 kcal/h | 8512 kcal/h |
| | 25591 B.T.U./h | 33780 B.T.U./h |
| UPS fan capacity [m ³ /h] | 3500 | |
| Max current leaked to earth ** | ≤ 300 mA | |

⁽⁴⁾ Data refer to typical load (75% kVA and pf 0,66)

* 3,97 B.T.U. = 1 kcal

** The dispersion current of the load is added to that of the UPS on the ground protection conductor.

this page intentionally left blank

e-mail: info@gtec-power.eu

www.gtec-power.eu