



GTEC UPS MODEL:


**MINIMUST**

Settings in 3/3, 3/1, 1/1

**SERVICE DOCUMENT**



- 8- If you want set the output in single phase, you must enter in the “Rate Setting” menu and set the parameter “33/31(1)” in “Syscode Setting1” window.

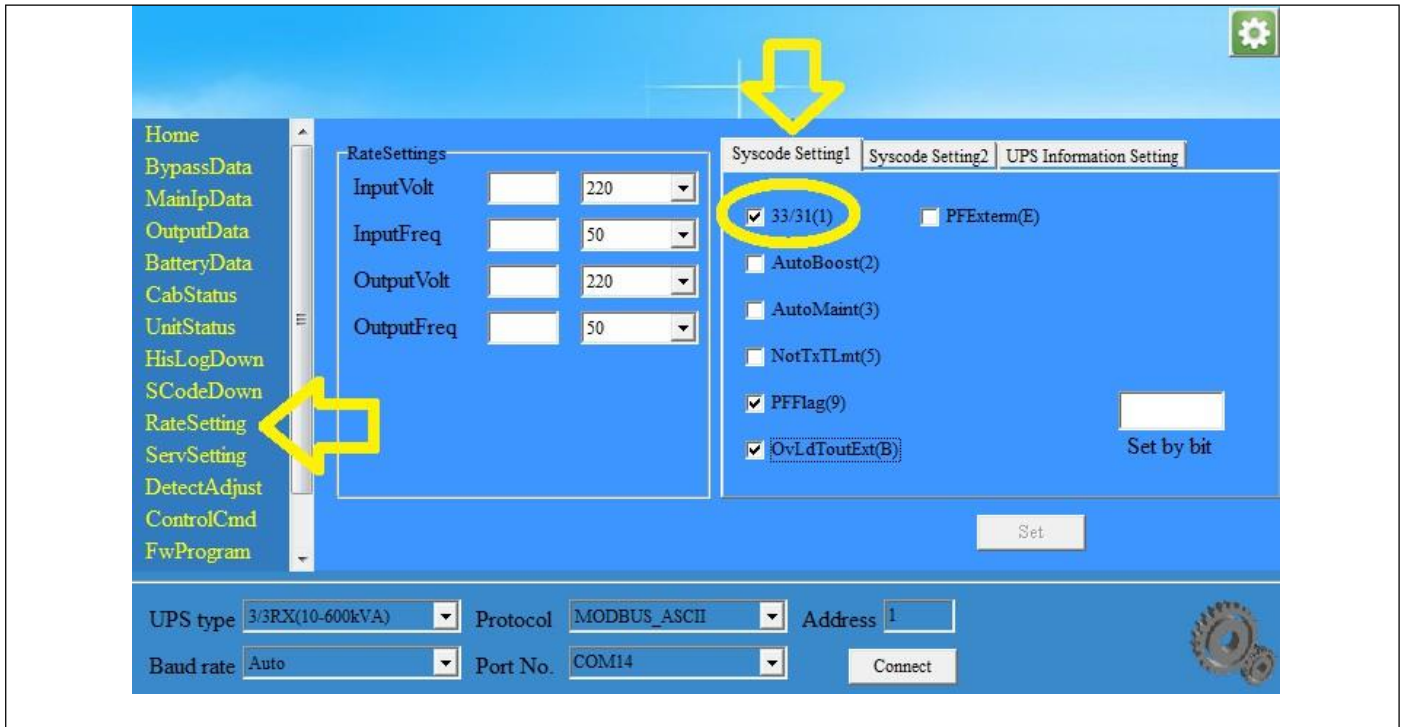

- 9- Now cut the input and aux mains, and wait 30 seconds.  
10- Connect the input, bypass and output wire in correct way to the terminals (3/3 or 3/1 or 1/1)  
11- Now is possible to supply the ups with the new settings.

## Appendix A. Power Connection of Modular System

Fig.B-1 illustrates the power connection of modular UPS in what is known as the 3/3, 3/1 and 1/1 configuration.

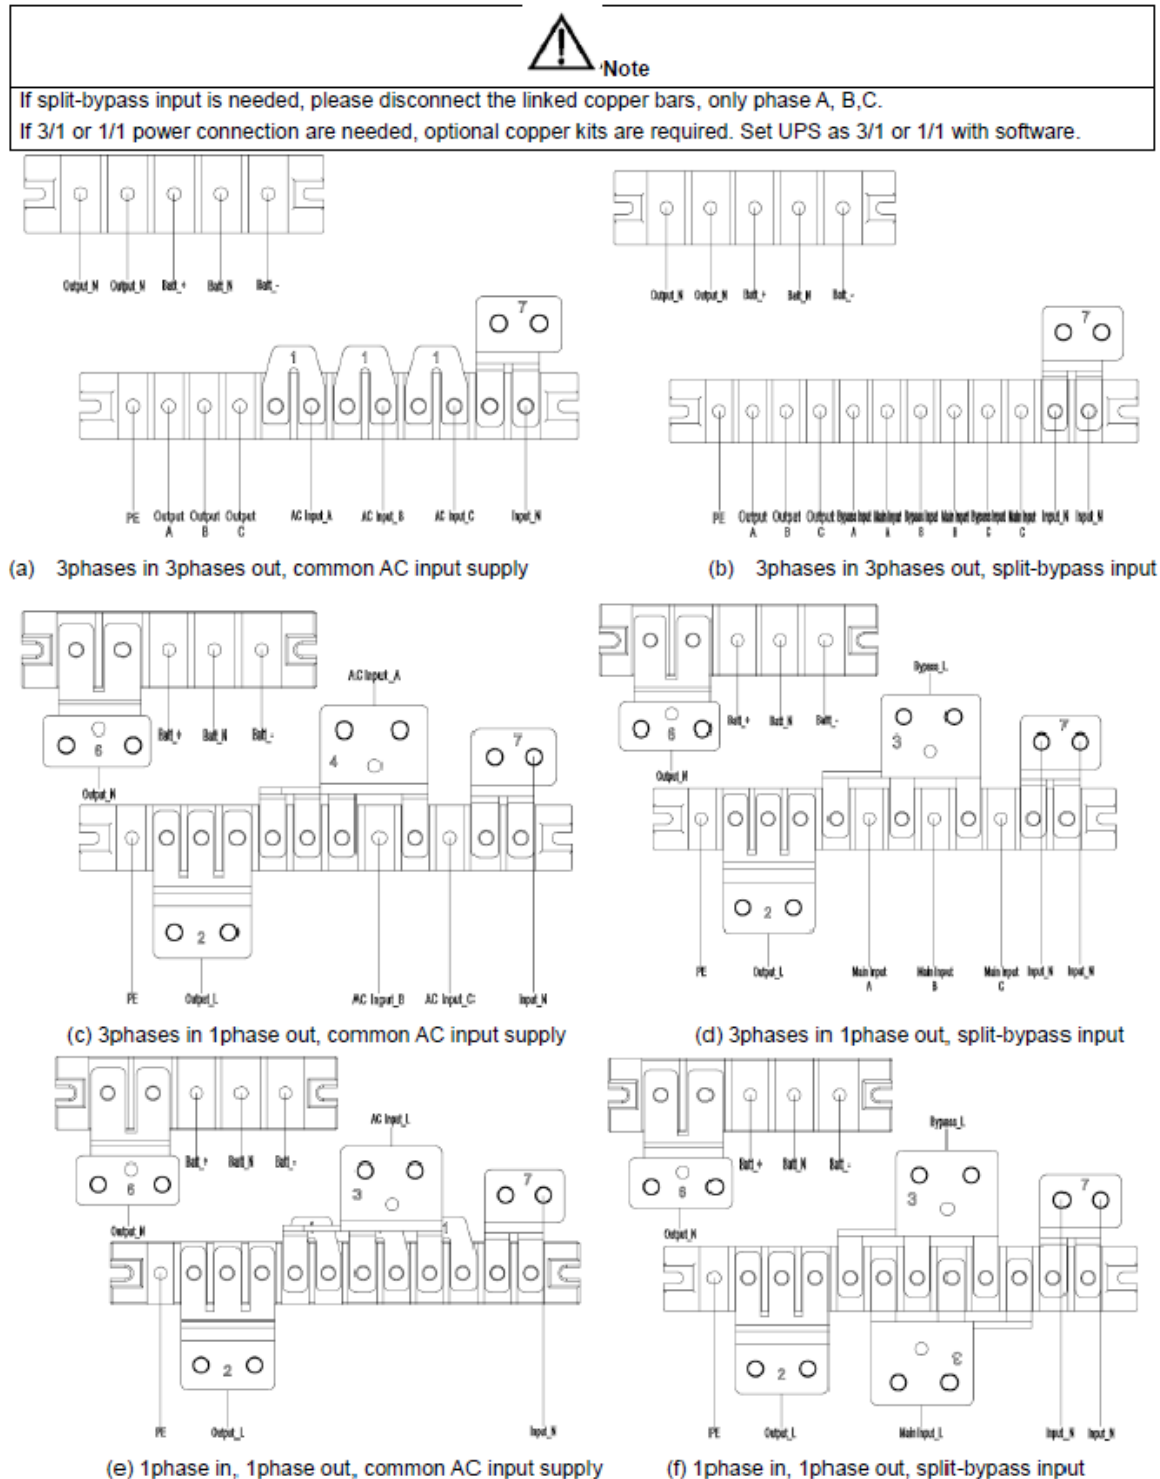


Fig.B- 1: Power Connection of Modular System

3 phases in, 3 phases out is default setting.

If user need to set UPS as 3 phases in, 1 phase out, connect cables as Fig.B-1(c) or (d) as needed. Then set UPS with software as below: