



GTEC UPS MODEL:

**NS3000 10 – 30 kVA**

**LCD SETTING**

## NS3000

## 10-20-30kVA LCD setting

From LCD is possible change the

- input voltage nominal
- Output voltage nominal
- Output frequency nominal

Start from home menu

- Press Enter (one icon will blink, normally the input one, but doesn't matter which one)
- Press the 2 arrows at same time for about 5sec till a new menu will come, as follow



- Press Enter to change the value, a second column will appear



- Once select the value you need to modify, you can increase or decrease it using the 2 arrows
- Once finish, press enter up the selected value are take on left column
- Press home to exit setting menu
- Stop and start UPS (Logic has to reboot) to update new value, if load is present before stop UPS, transfer the load in to manual bypass.