



GTEC UPS MODEL:

ZP120N 1 - 3K

1ph in / 1ph out

FAULT LIST

Normal operating mode	Code
No output mode	0
Bypass mode	1
Line mode	2
Battery mode	3
Battery test mode	4
ECO mode	5
Converter mode	6
Warning	Code
Site fail	09
Fan fail	10
Battery over voltage (over charged)	11
Battery low	12
Charge fail	13
DC-DC temperature high	21
Inverter temperature high	24
Ambient temperature high	25
Line voltage high (OVCD action)	26
Battery open	27
Overload	29
EPO	30
Fault	Code
Bus fault	05
Inverter fault	06
Overload fault	07
Over temperature fault	08
Inverter short	14
Bus short	28