


# QUICK START UNPACKAGING

## WARNING : UNBALANCED WEIGHT

**WARNING :** HANDLE THE EQUIPMENT WITH CARE WITH THE APPROPRIATE MOVING TOOLS

**WARNING :** EQUIPMENT WHEELS ARE FOR FINAL POSITIONING ONLY

- 1) CHECK IF THE PACKAGING IS OK.
- 2) REMOVE CARTON BOX.
- 3) REMOVE THE EXTERNAL NYLON.
- 4) LOWER THE 4 ADJUSTABLE FEETS OF CABINET.

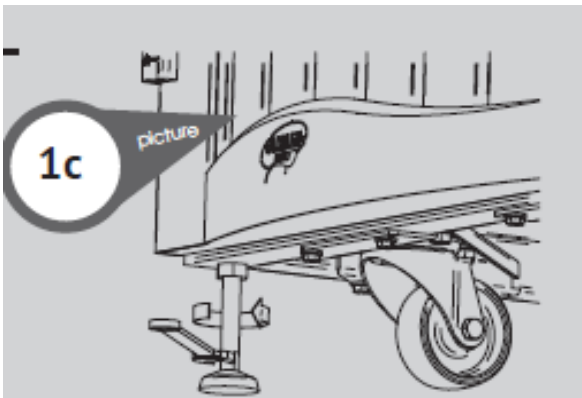

- 5) REMOVE THE SCREW INTO THE CABINET FOR FIXING THE PALLET.



- 6) REMOVE THE PALLET UNDER THE CABINET.
- 7) PULL UP THE 4 ADJUSTABLE FEET.

(Now the cabinet is on the weels)